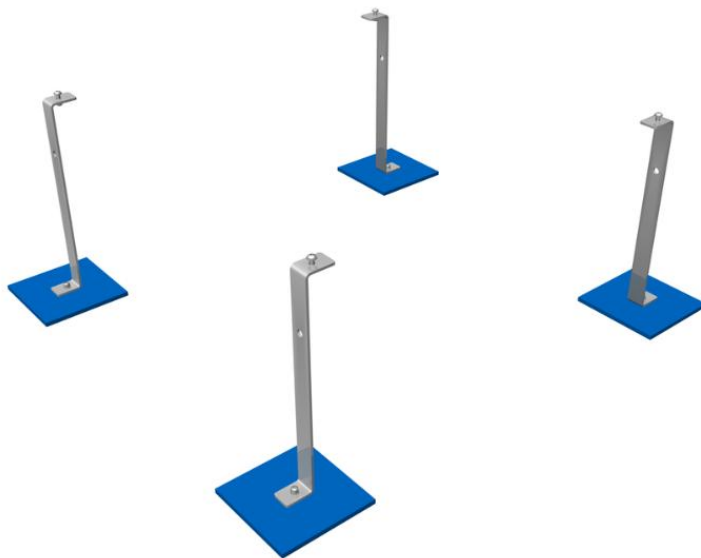


DEEP FOUNDATION SET FOR PARK FURNITURE

Anchorage component for free standing Park furniture like benches, tables and bicycle racks. Dig about 50 cm deep hole and put the anchor plate to bottom. Screw the metal frame to the plate and other end to the furniture leg. Then cover the hole and compress it. The Foundation set includes four anchoring plates and metal frames.

Foundation options

Deep mounting