


INSTALLATION GUIDE

TRAMPOLINE RADO


Ø125 cm, Code: MA-SA-01,
Ø140 cm, Code: MA-SA-02,
Ø150 cm, Code: MA-SA-03,
Ø160 cm, Code: MA-SA-04,
Ø175 cm, Code: MA-SA-05,
Ø200 cm, Code: MA-SA-06,
Ø225 cm, Code: MA-SA-07.




1. The trampoline is delivered as one complete piece and it is ready for installation.

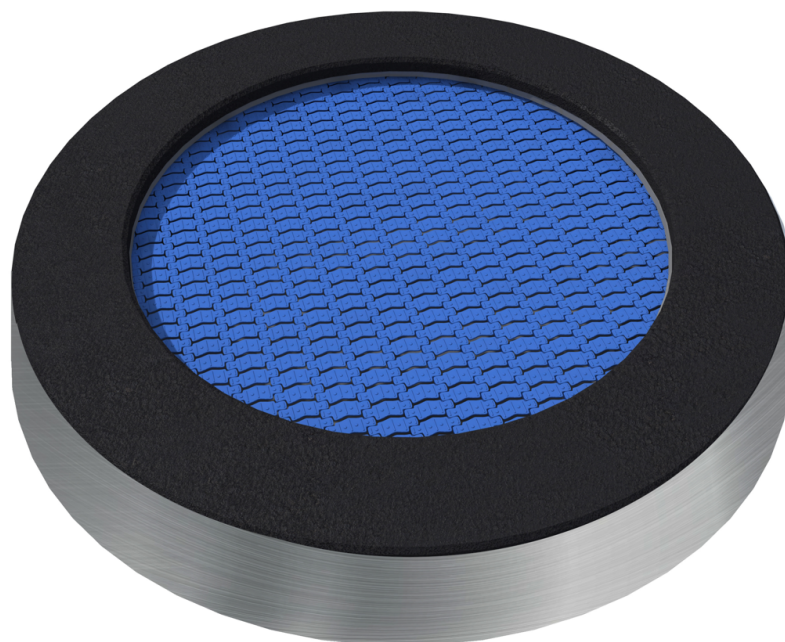

2. The trampoline is installed in the ground - foundation depth is 40 cm.

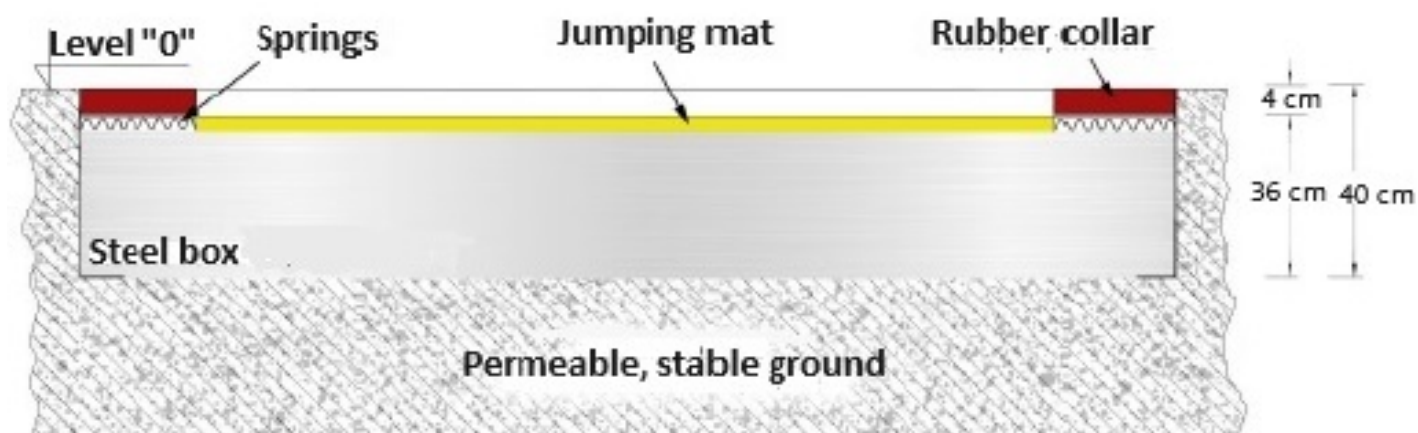

3. The trampoline is mounted directly on a properly leveled, stable and water-permeable ground.

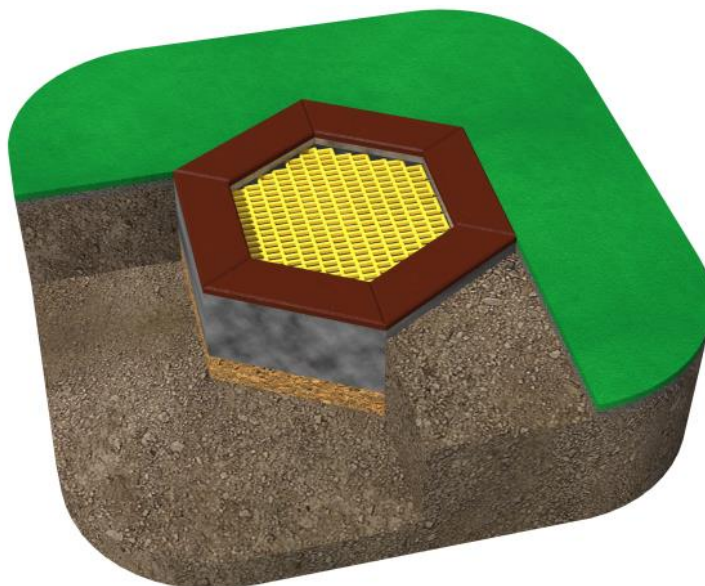

Code	Name	A - dimension	B - jumping area	C - safety area
		A - Trampolingröße	B - Sprungmatte	C - Sicherheitsraum
MA-SA-01	RADO 125	Ø 1,25 m	Ø 0,75 m	Ø 3,75 m
MA-SA-02	RADO 140	Ø 1,4 m	Ø 0,9 m	Ø 3,9 m
MA-SA-03	RADO 150	Ø 1,5 m	Ø 1,0 m	Ø 4,0 m
MA-SA-04	RADO 160	Ø 1,6 m	Ø 1,1 m	Ø 4,1 m
MA-SA-05	RADO 175	Ø 1,75 m	Ø 1,25 m	Ø 4,25 m
MA-SA-06	RADO 200	Ø 2,0 m	Ø 1,5 m	Ø 5,5 m
MA-SA-07	RADO 225	Ø 2,25 m	Ø 1,75 m	Ø 5,75 m

NOTE!

The width of the hole should be larger than the size of the trampoline - this will make installation easier. If the ground is not very stable or weak, we recommend strengthening it.