

LAPPSET®


PANNA



ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

REF: 080905





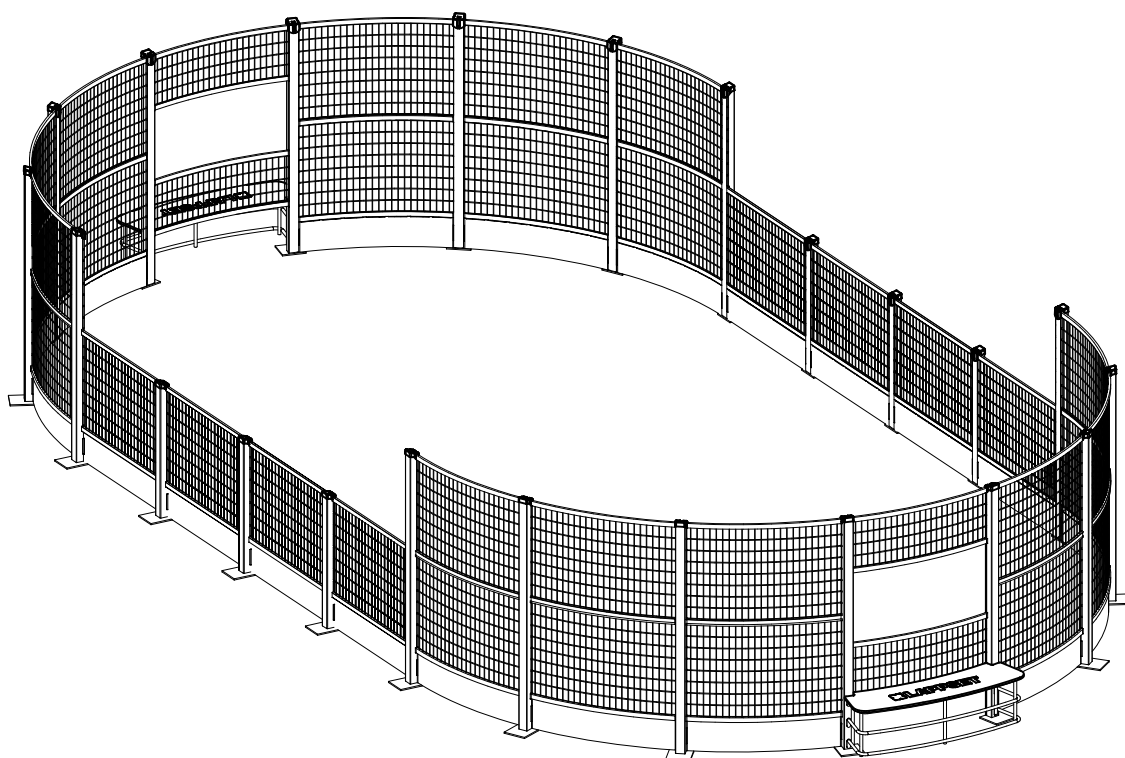


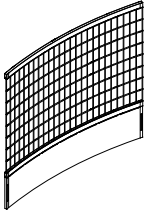
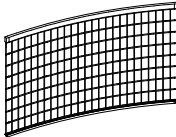
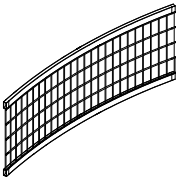



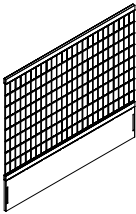
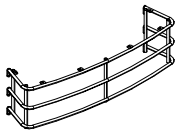


DATE: 28.3.2019




080905M



709146	PCS	705228	PCS		PCS		PCS		PCS		PCS
	2		1								
											
20x530x1562											



910749	PCS	910750	PCS	910748	PCS	904986	PCS	904975	PCS	904974	PCS
	2		2		12		16		2		2
											
LEFT		RIGHT						LEFT		RIGHT	
904973	PCS	906370	PCS	904672	PCS	904680	PCS	910753	PCS	904958	PCS
	8		12		12		4		6		6
											
904957	PCS	906364	PCS	904686	PCS	906400	PCS	906399	PCS		PCS
	6		8		2		2		2		
											
				GOAL		LEFT		RIGHT			
	PCS		PCS		PCS		PCS		PCS		PCS

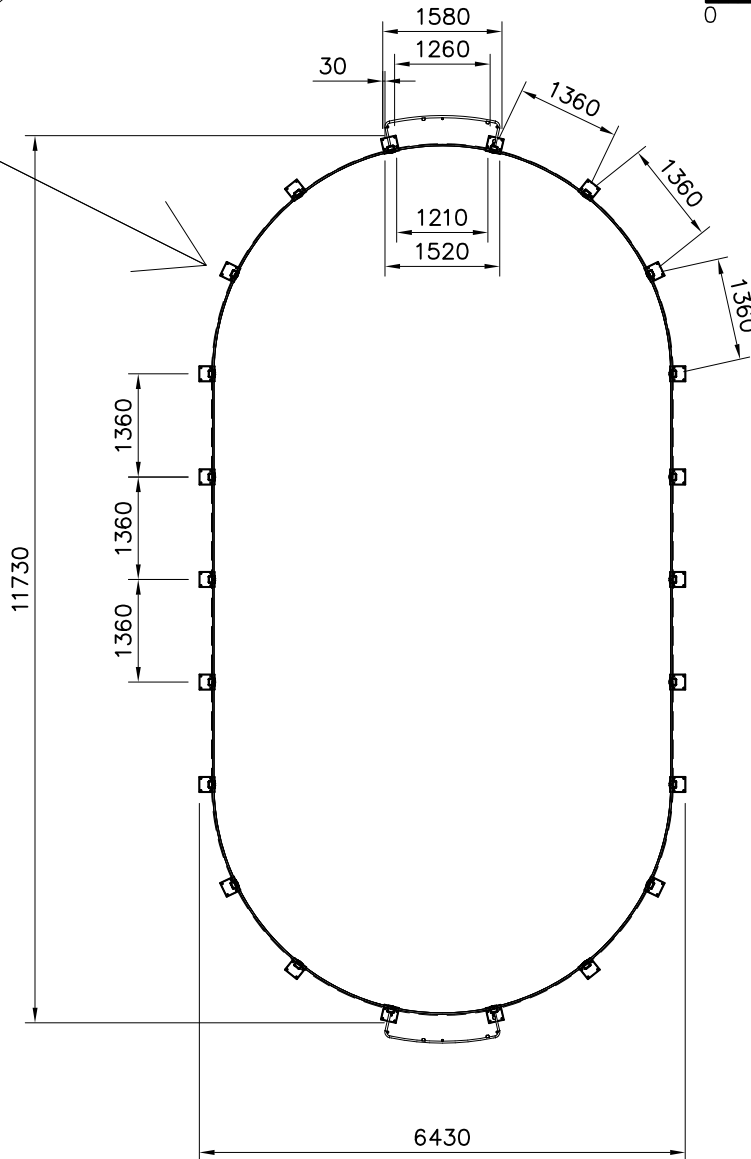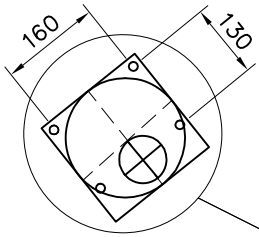


Kun käytetään keinonurmea


- 1) Ensin kannattaa liimata tekonurmen palaset yhteen. Lisätietoja Saltex asennusohjeessa.
- 2) Kun liima on hyvin kuivunut niin rakennetaan Panna nurmen ympärille.




When using artificial grass



- 1) Install and glue the artificial grass (see the Saltex installation instructions)
- 2) Build Panna 080905 on the artificial grass (Panna 080905 assembling instructions)

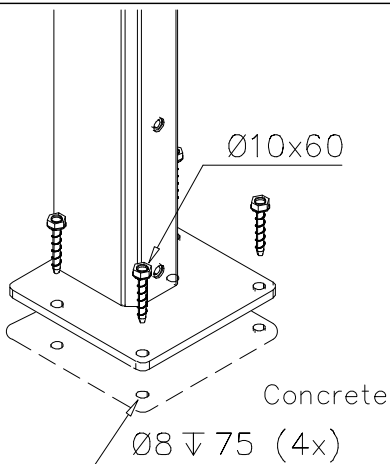

If the product is not installed on one large concrete platform, Option 1.

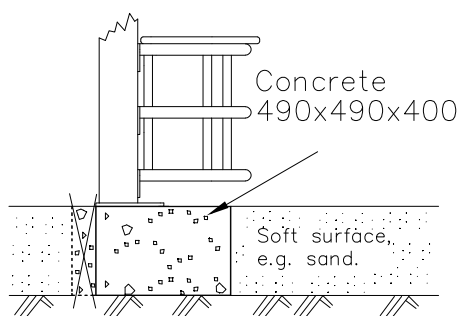


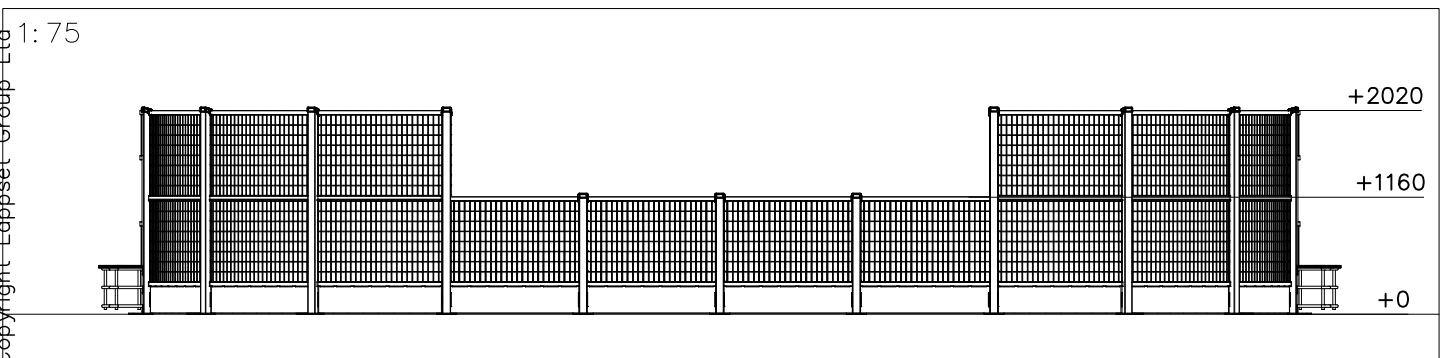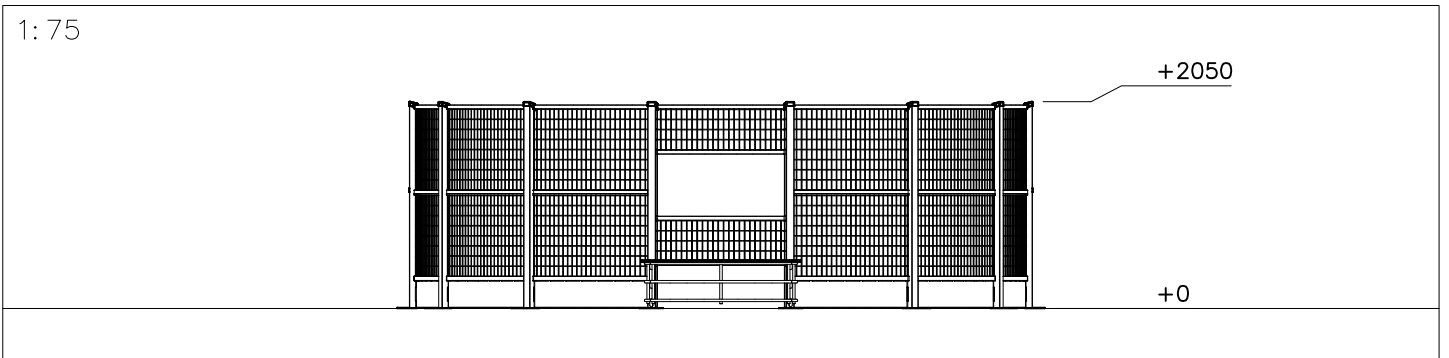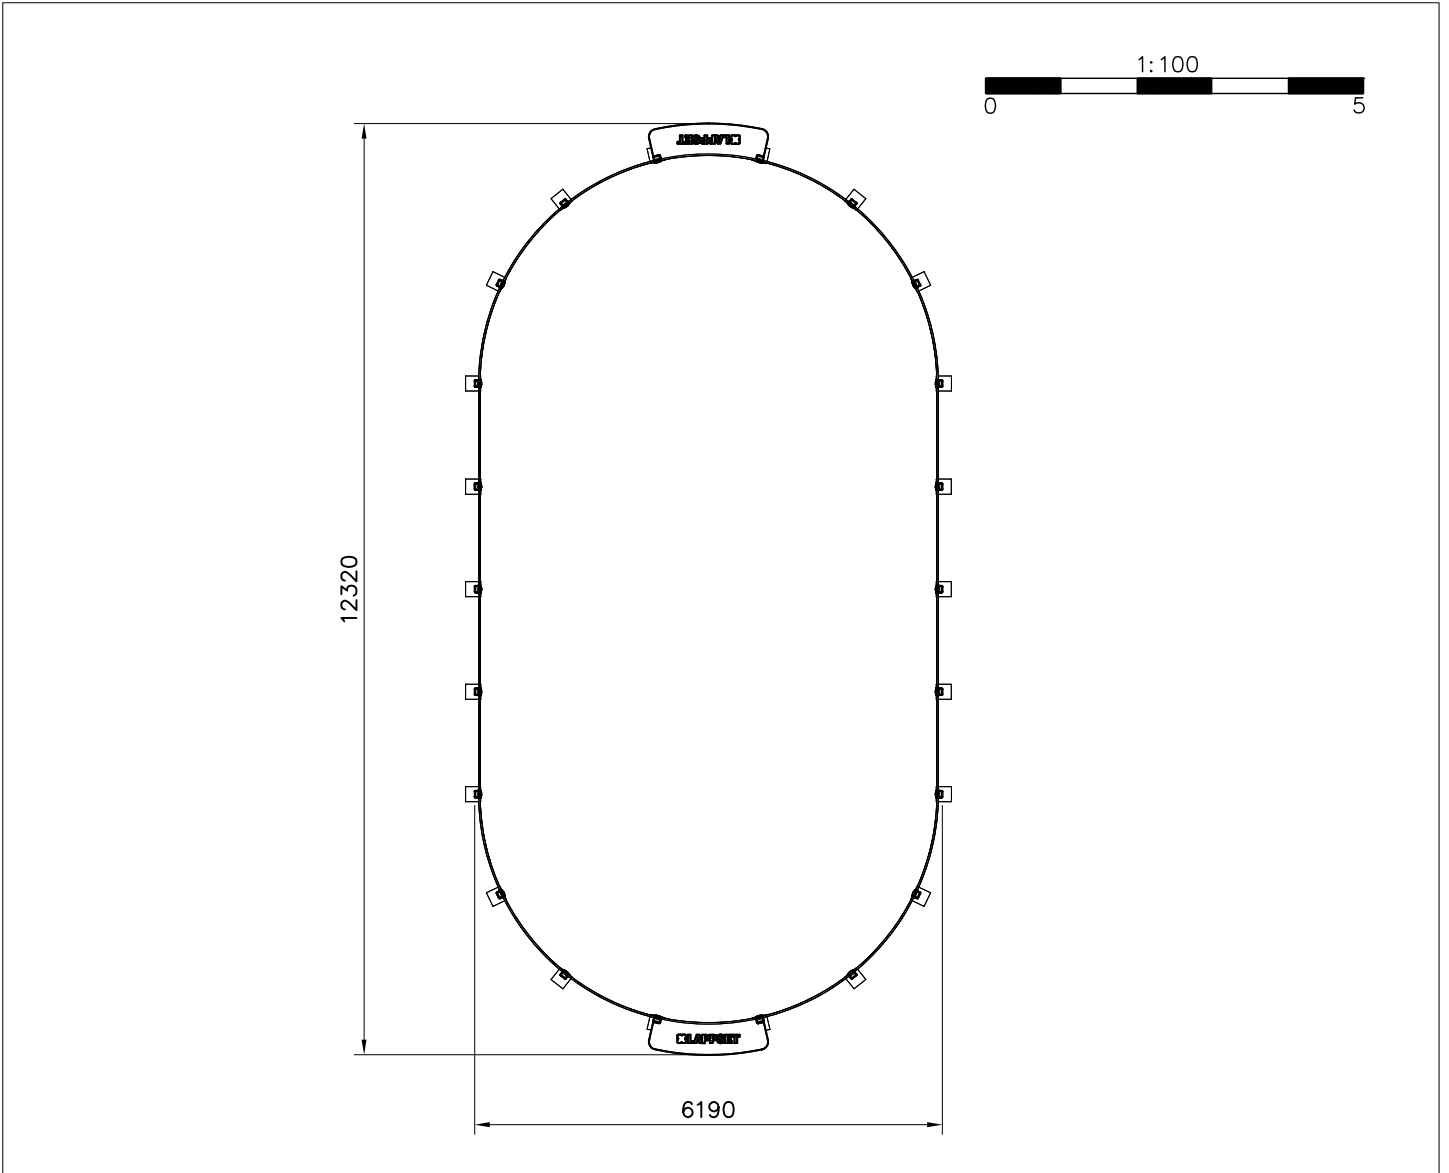

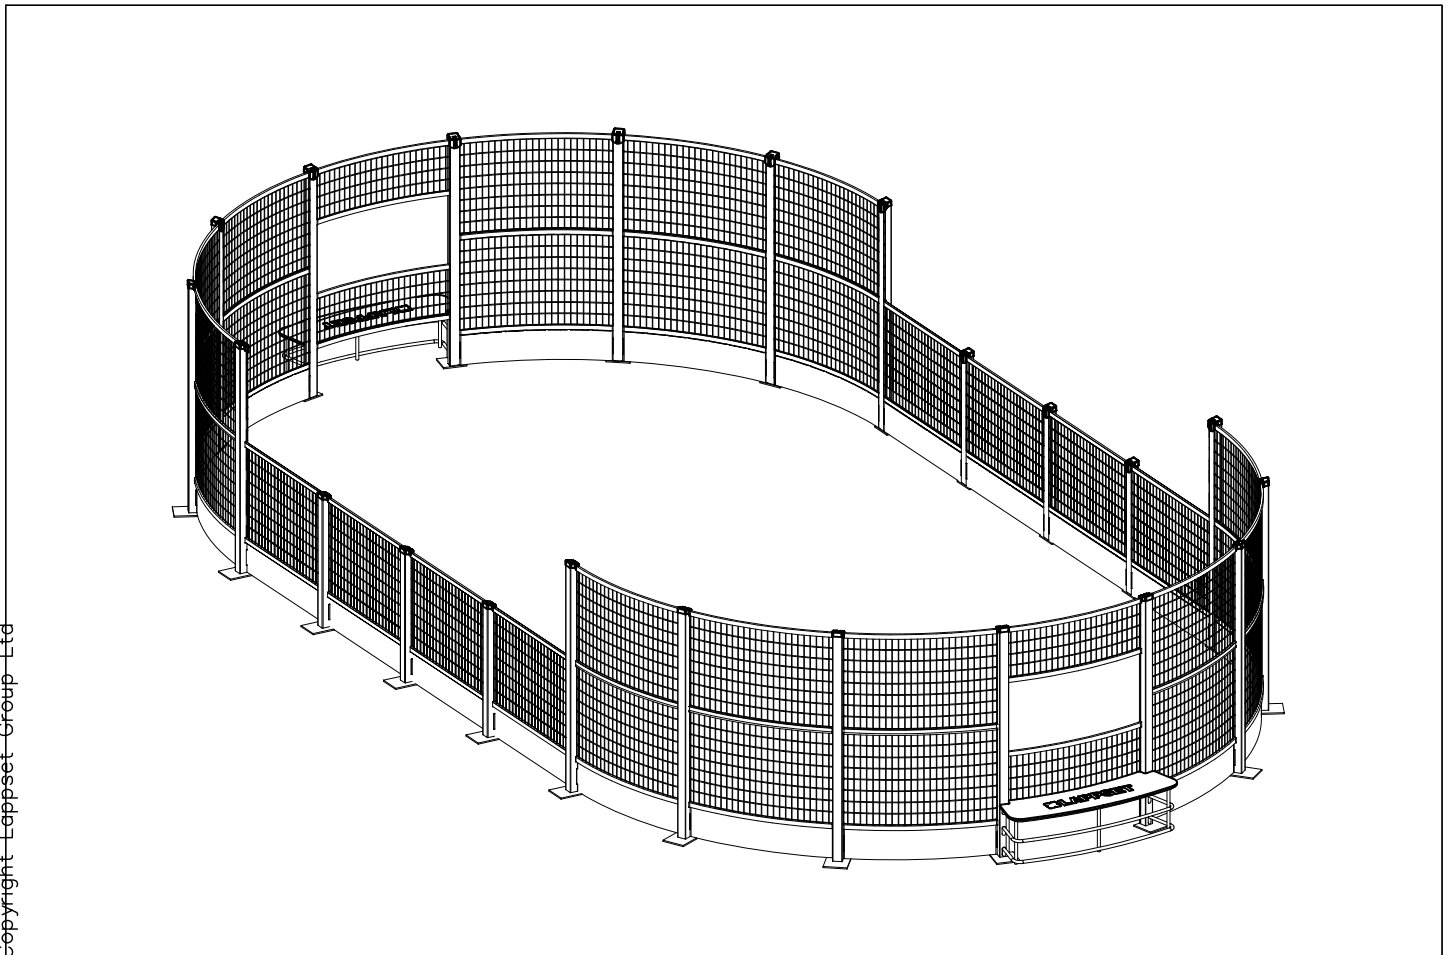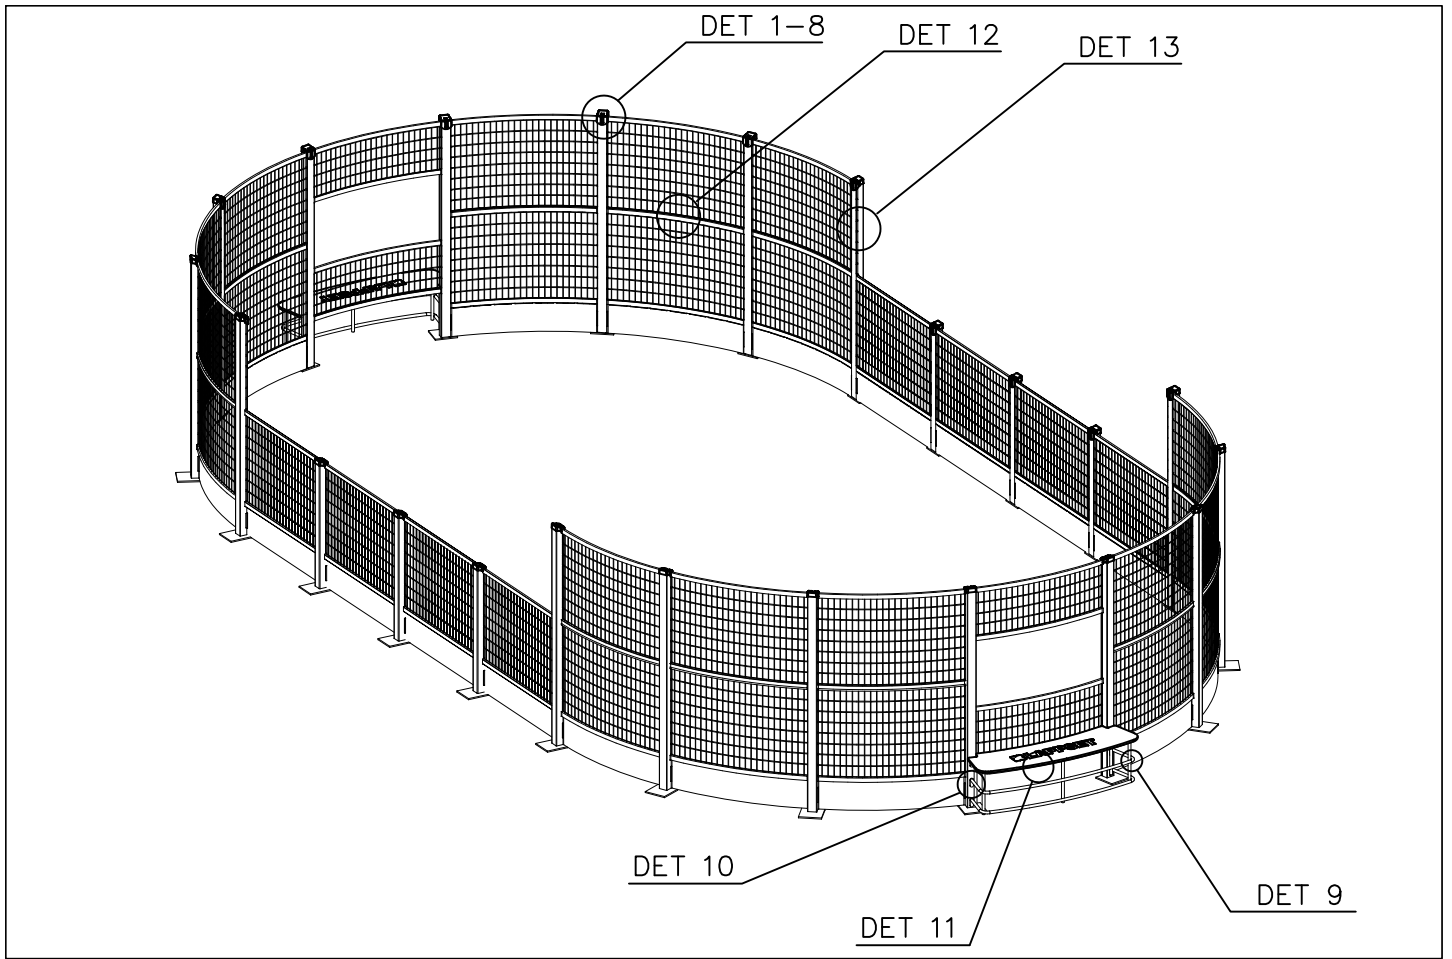

DET 1


M8 × 25

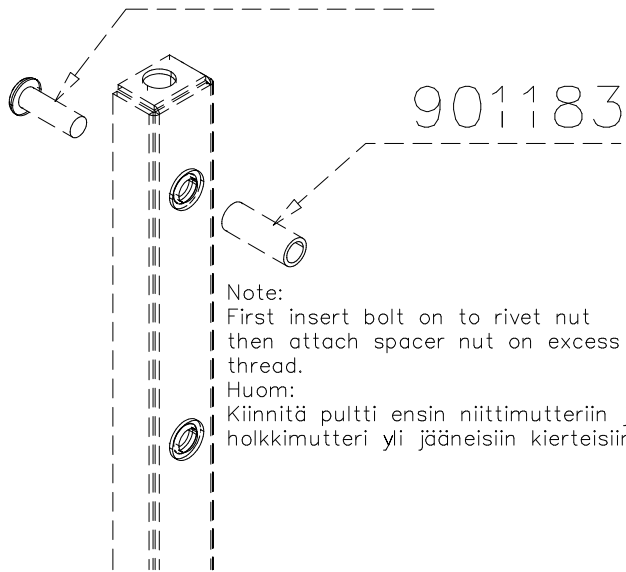


DET 2

902468


Note:
Cut to size and
glue to place.
Huom:
Leikkaa sopivaksi
ja liimaa
paikoilleen.

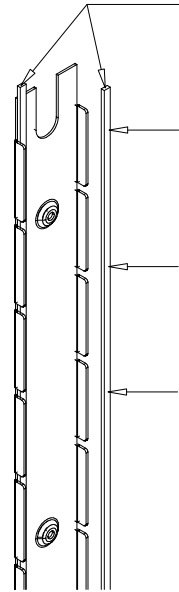

DET 3

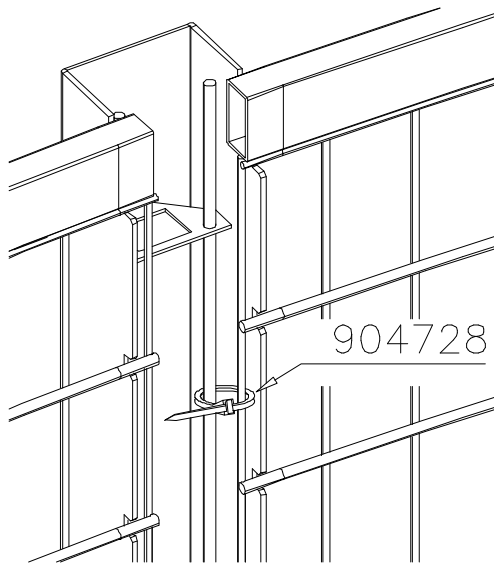


DET 4

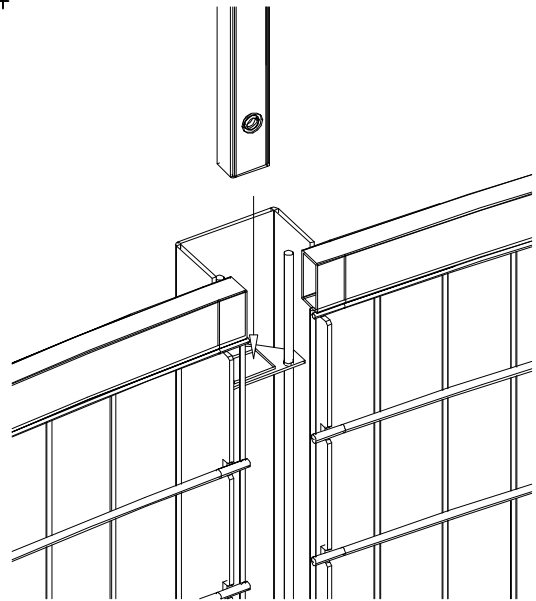


DET 5







901183

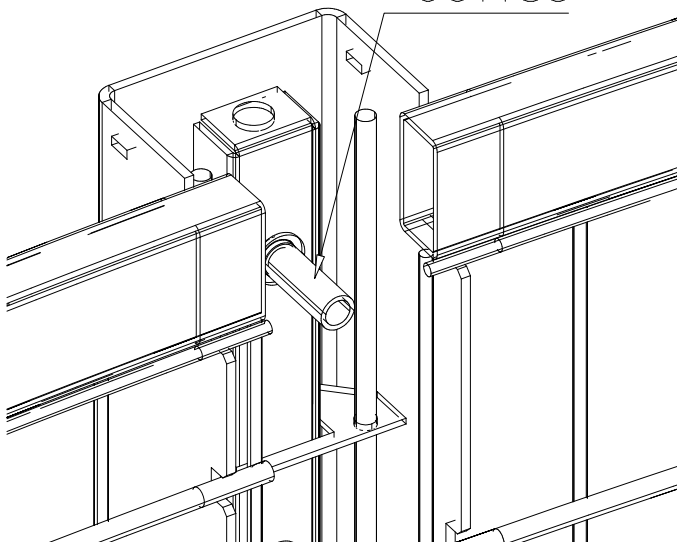




DET 6

904729

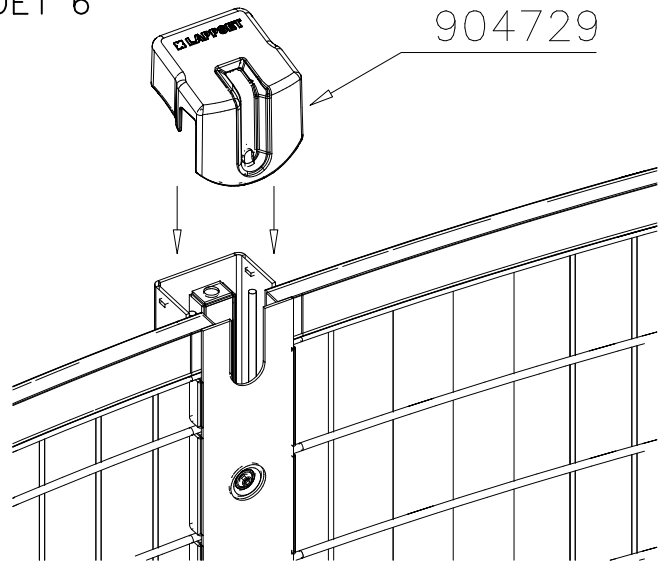

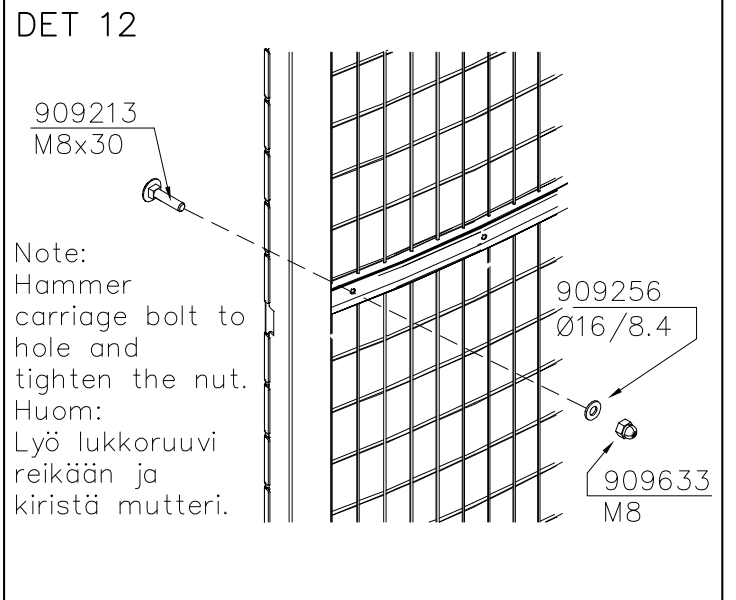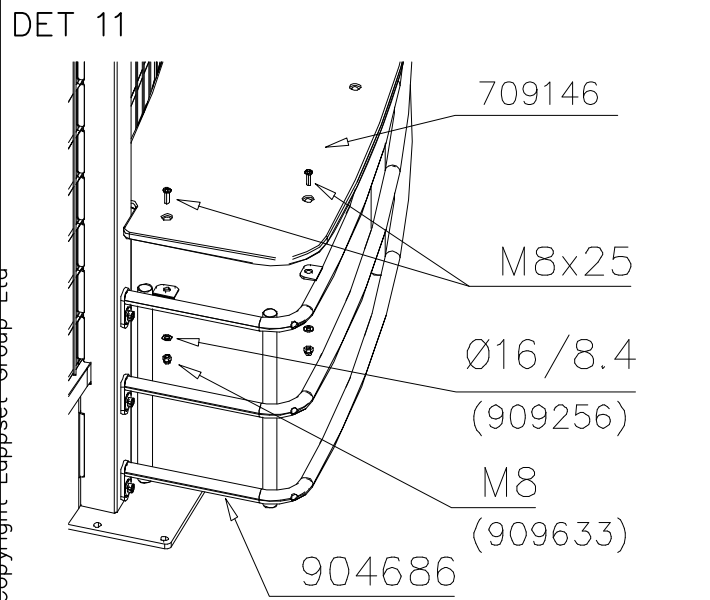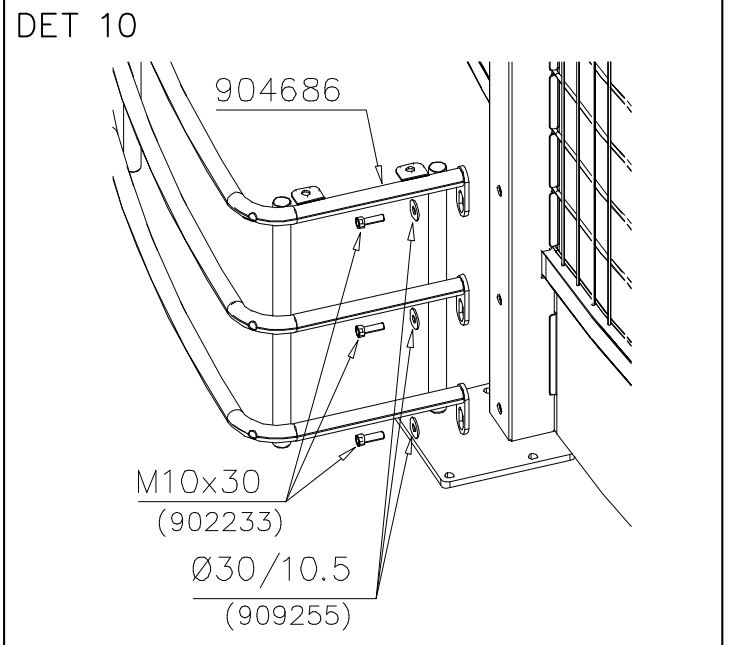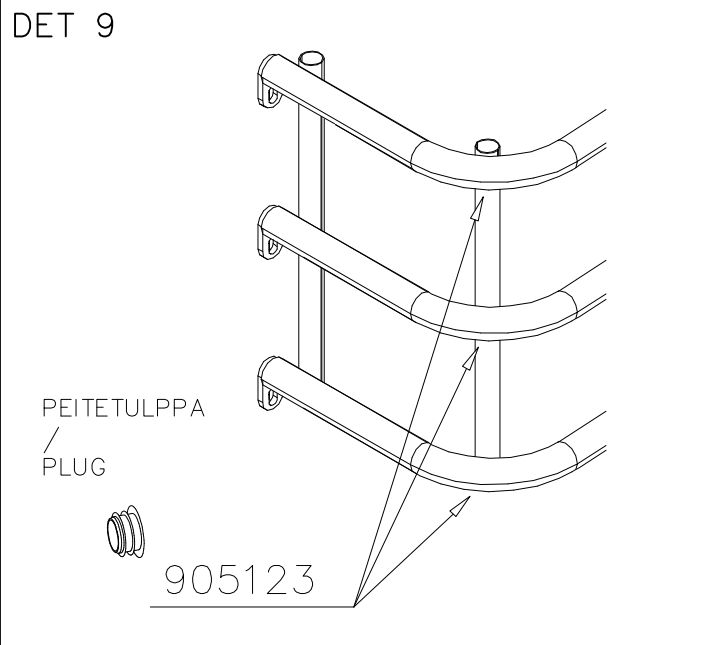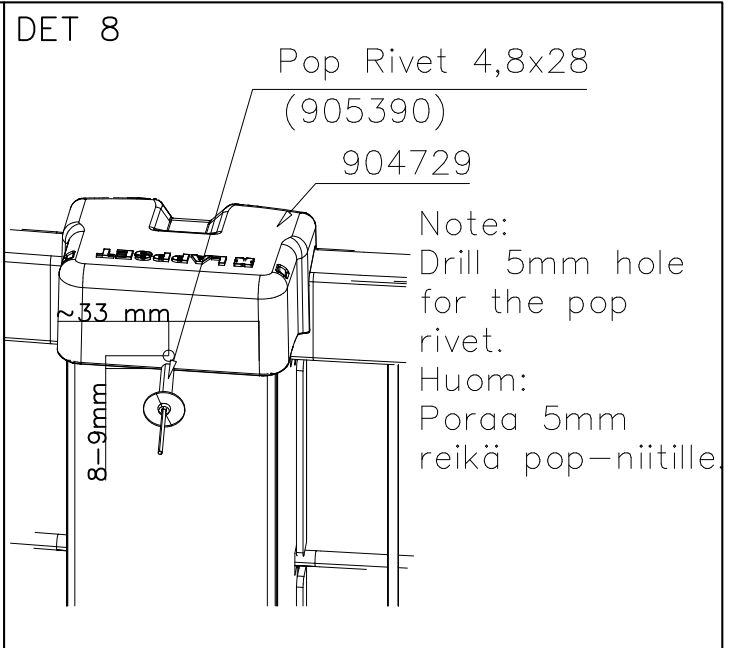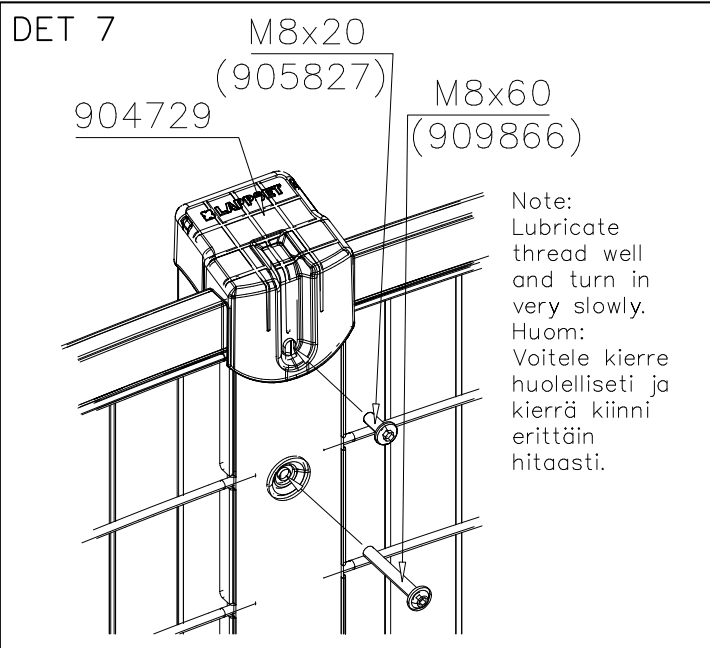
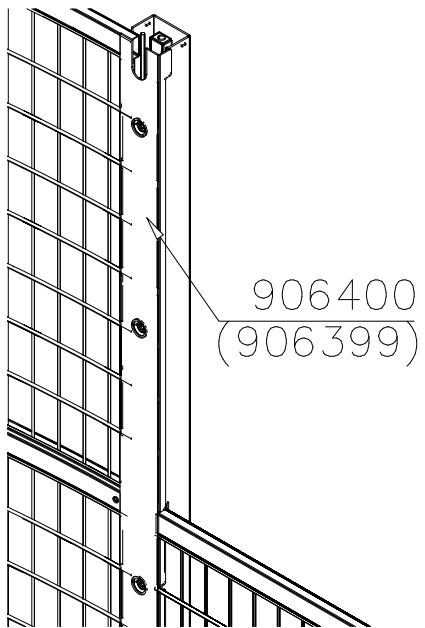
<p>DET 13</p>  <p>906400 (906399)</p>	<p>DET 14</p>
<p>DET 15</p>	<p>DET 16</p>
<p>DET 17</p>	<p>DET 18</p>

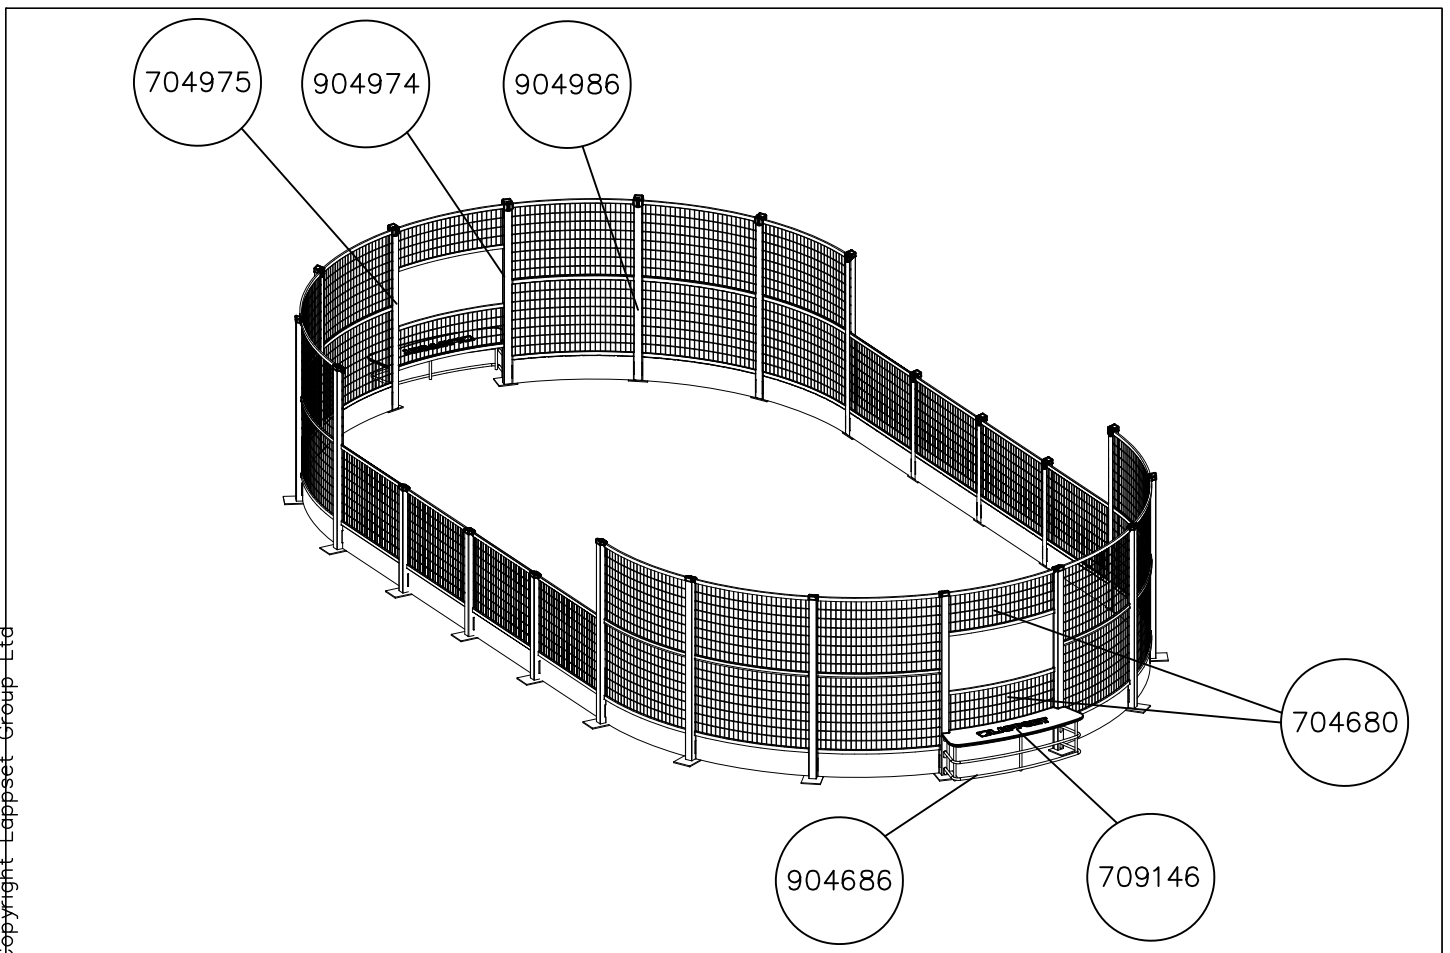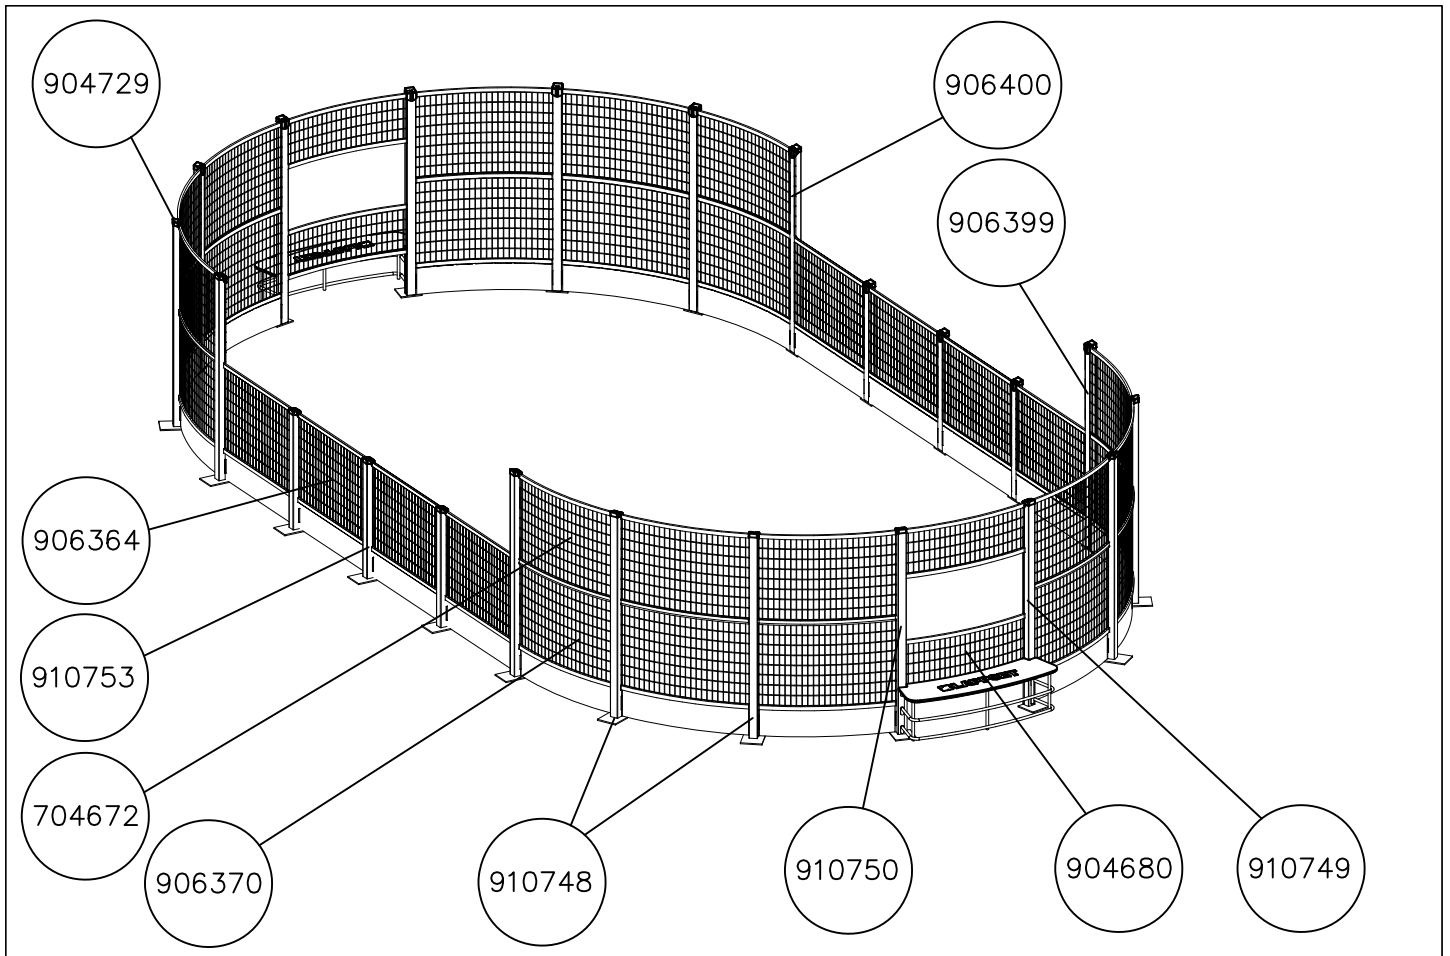

LAPPSET®


PANNA




ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION

REF: 080905





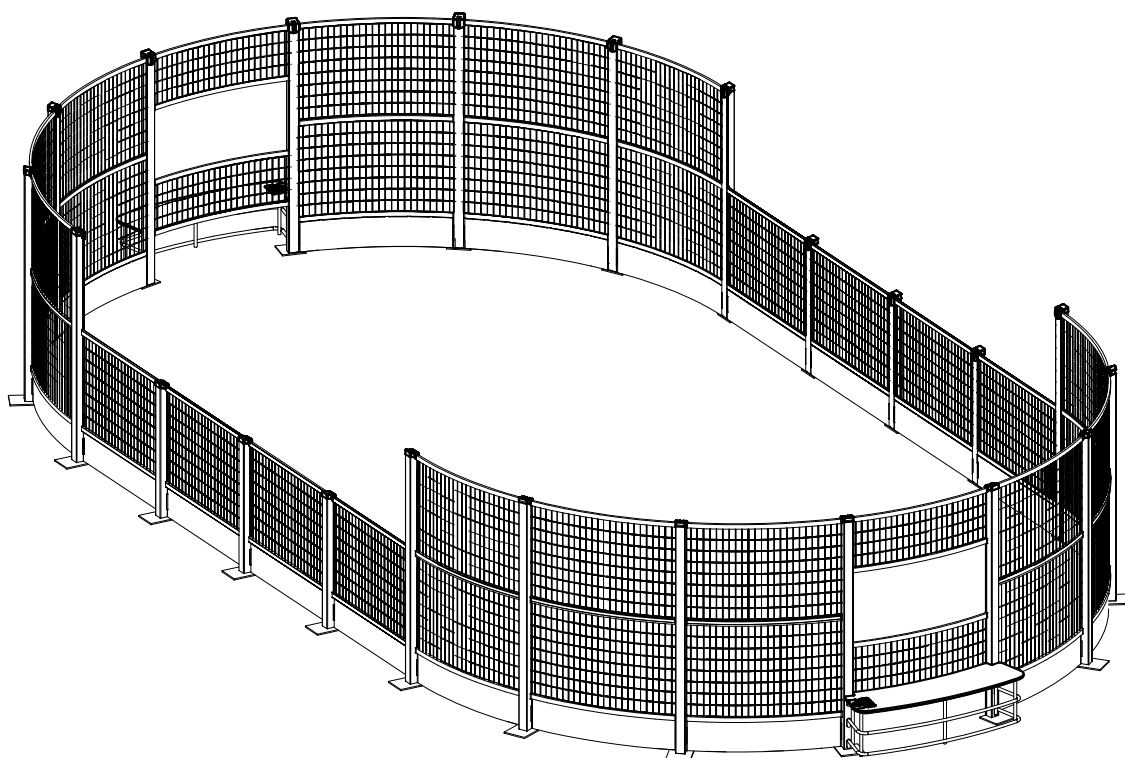


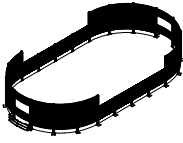
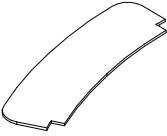




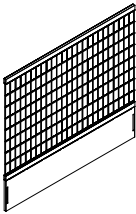
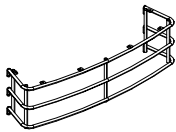


DATE: 23.5.2017




080905



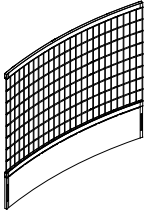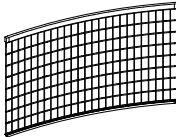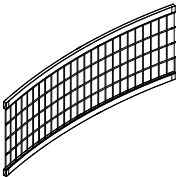906398	PCS	704229	PCS	705228	PCS		PCS		PCS		PCS
	1		2		1						
		20x530x1562									
	PCS		PCS		PCS		PCS		PCS		PCS

906398 =

904980	PCS	904982	PCS	904978	PCS	904986	PCS	904975	PCS	904974	PCS
	2		2		12		16		2		2
LEFT		RIGHT						LEFT		RIGHT	
904973	PCS	906370	PCS	904672	PCS	904680	PCS	904953	PCS	904958	PCS
	8		12		12		4		6		6
904957	PCS	906364	PCS	904686	PCS	906400	PCS	906399	PCS		PCS
	6		8		2		2		2		
				GOAL		LEFT		RIGHT			
	PCS		PCS		PCS		PCS		PCS		PCS

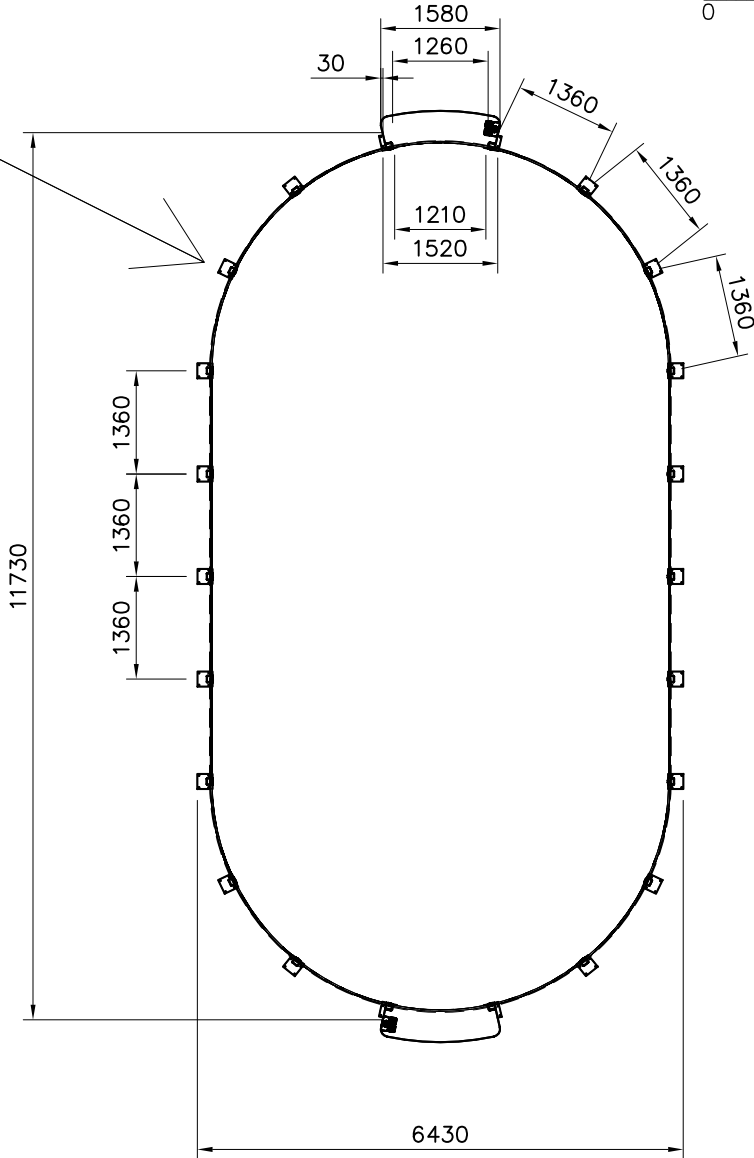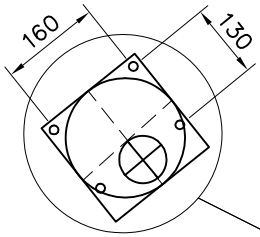


Kun käytetään keinonurmea


- 1) Ensin kannattaa liimata tekonurmen palaset yhteen. Lisätietoja Saltex asennusohjeessa.
- 2) Kun liima on hyvin kuivunut niin rakennetaan Panna nurmen ympärille.




When using artificial grass



- 1) Install and glue the artificial grass (see the Saltex installation instructions)
- 2) Build Panna 080905 on the artificial grass (Panna 080905 assembling instructions)

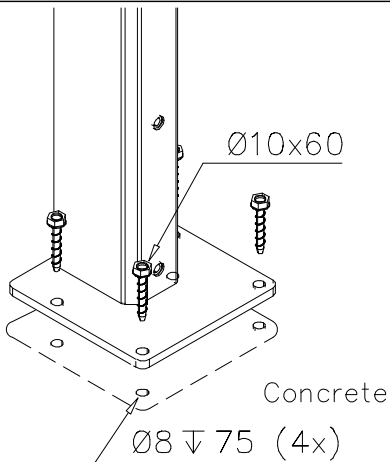

If the product is not installed on one large concrete platform, Option 1.

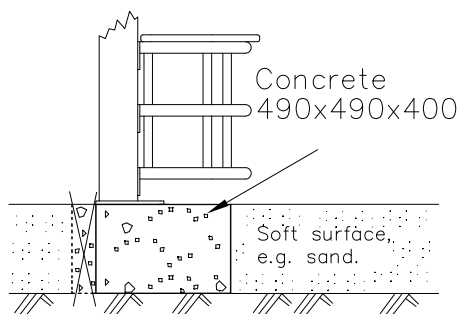


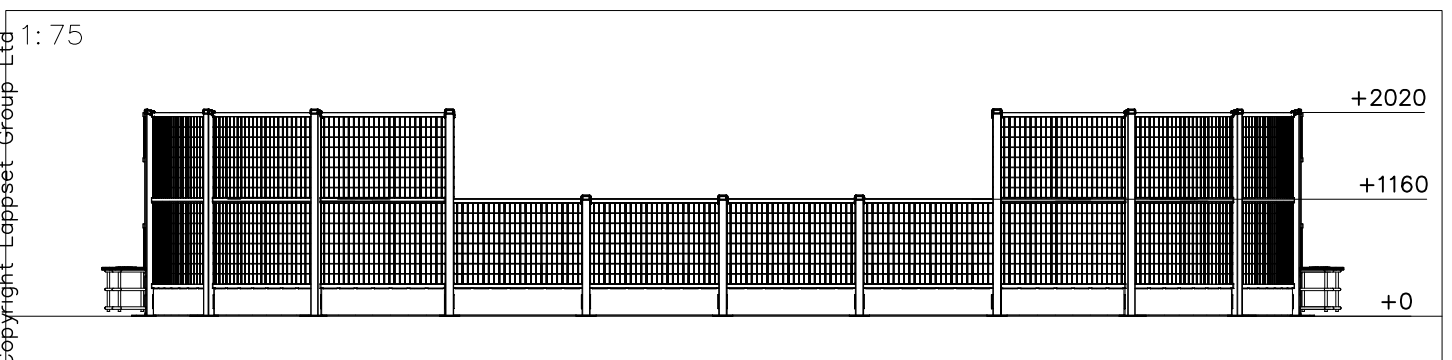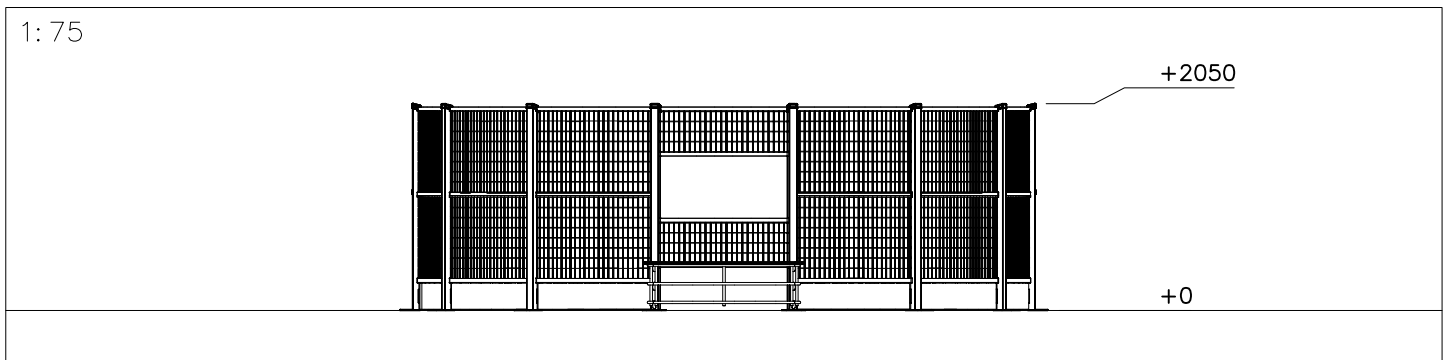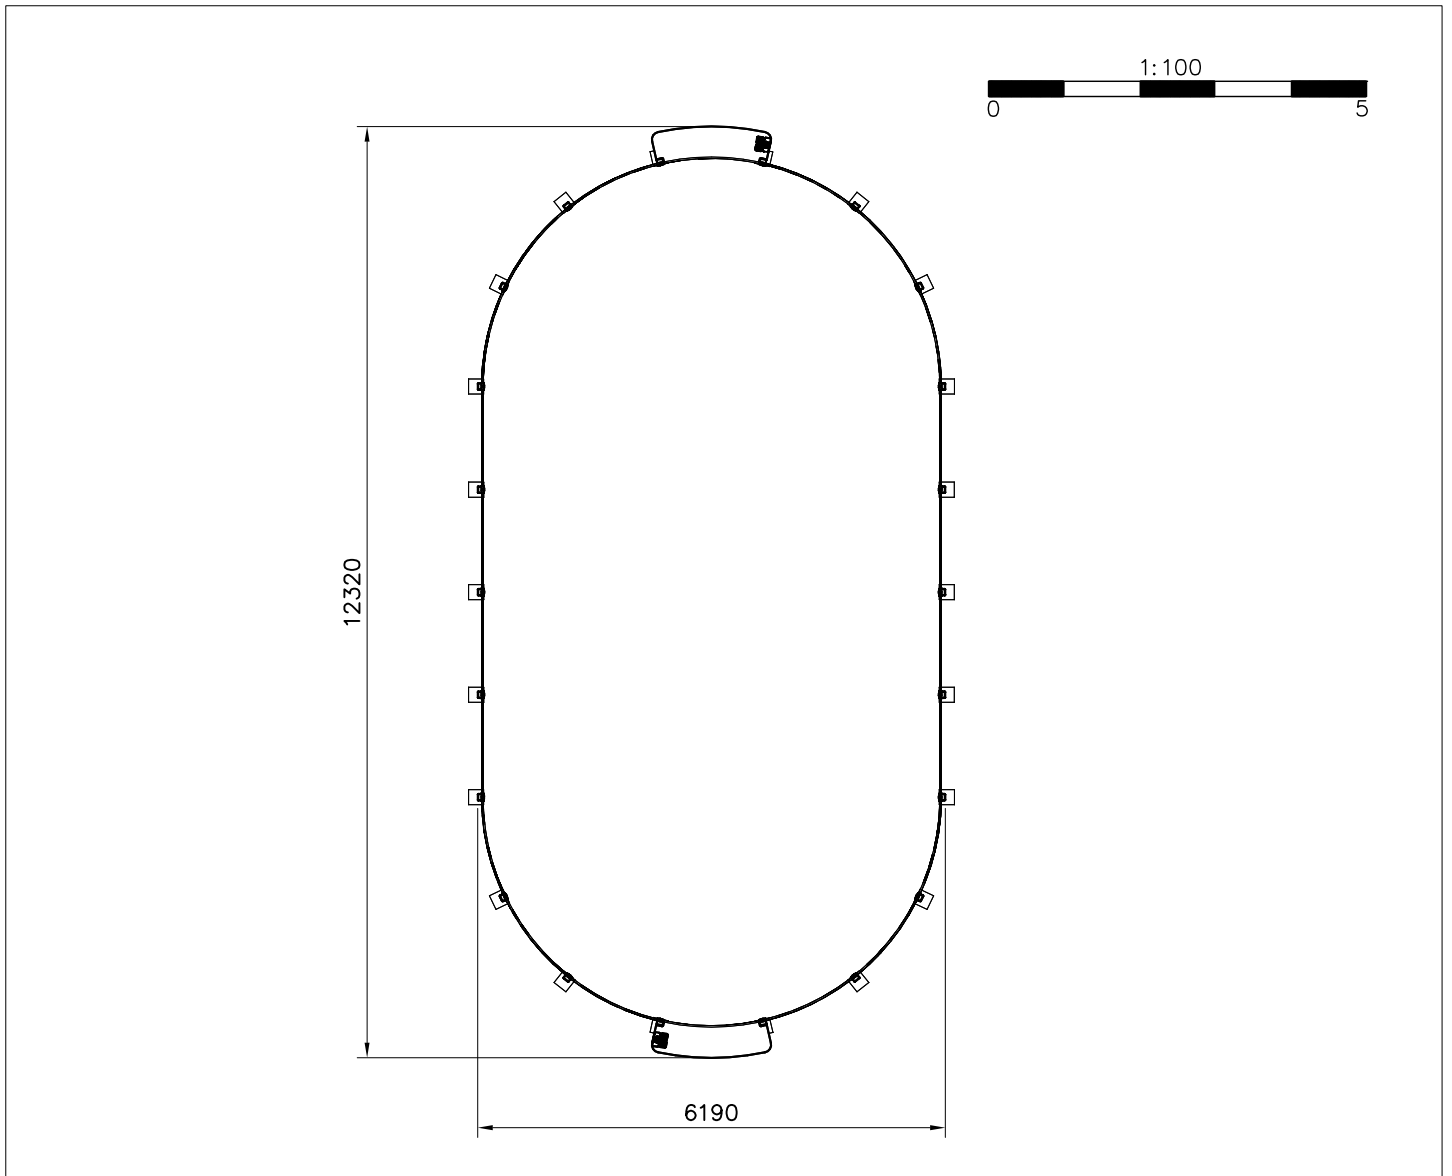

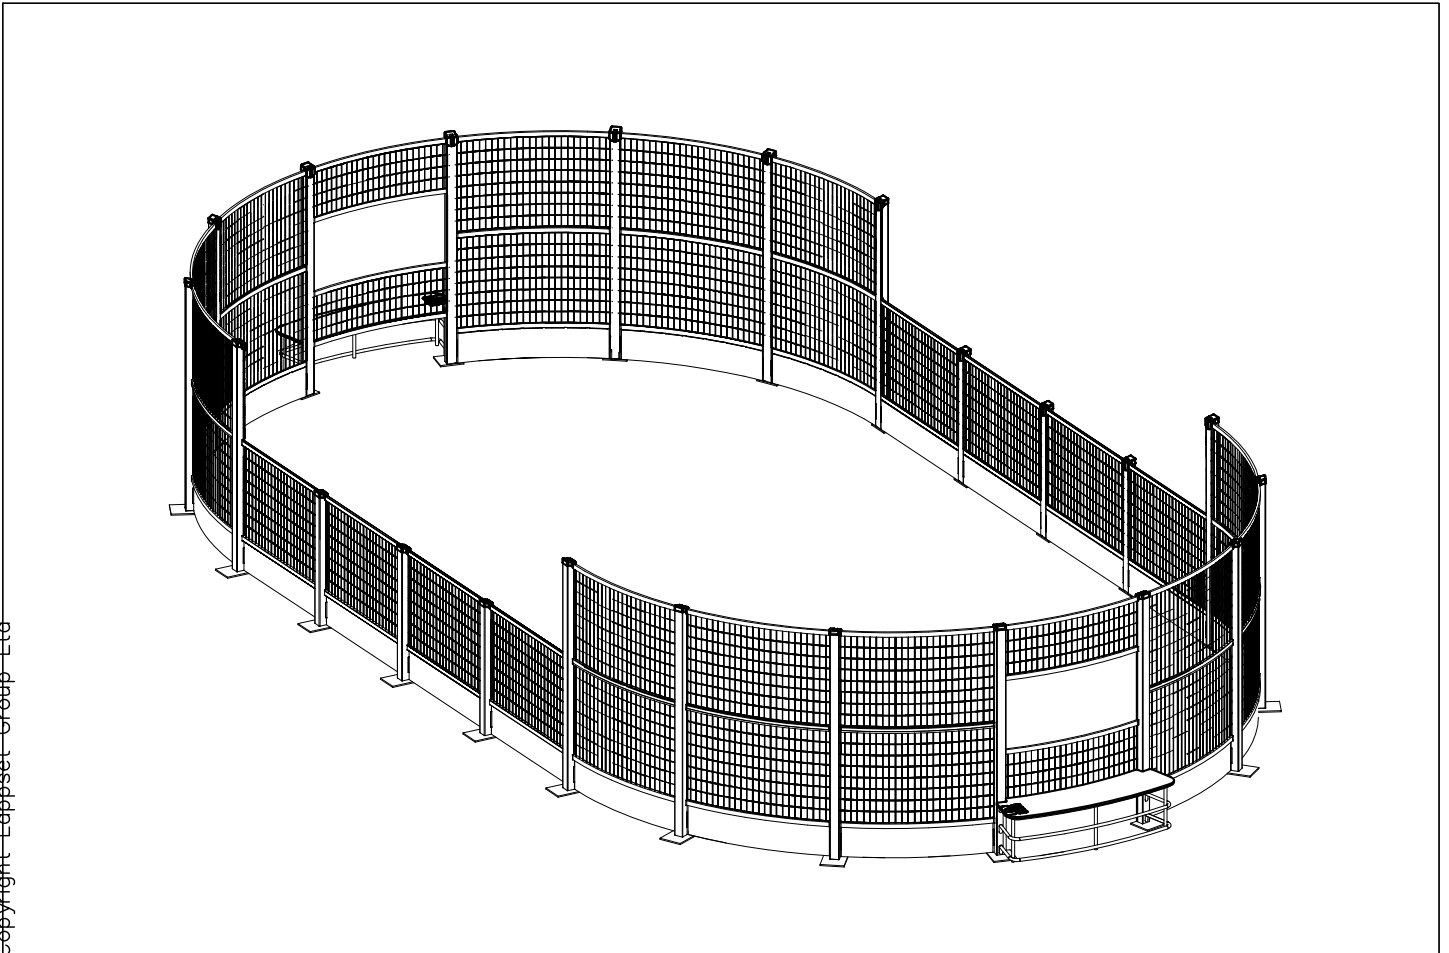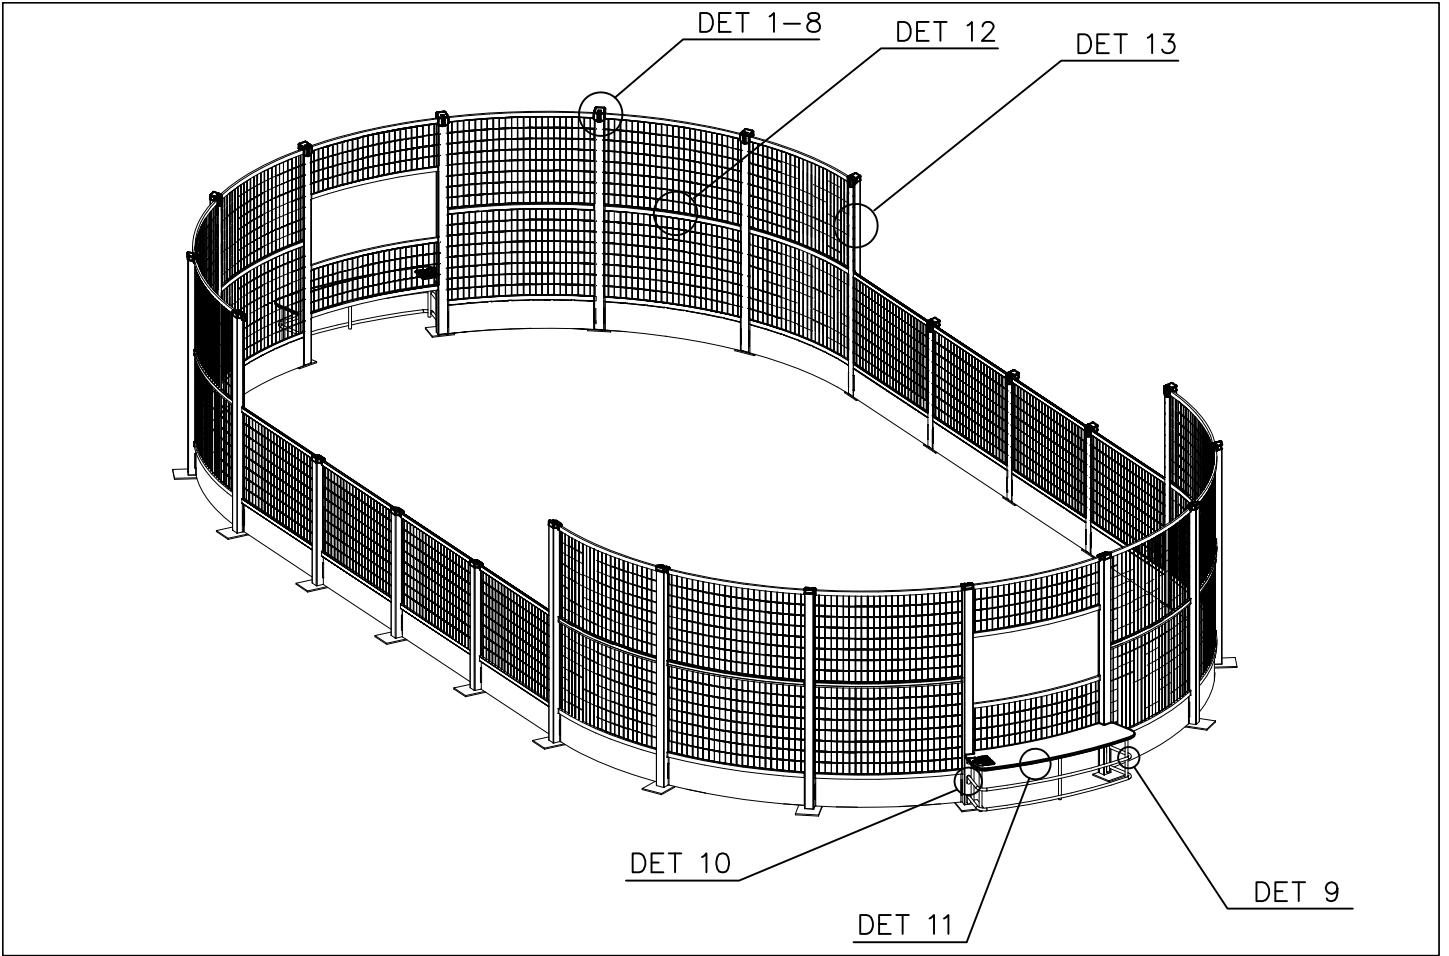

DET 1


M8 × 25

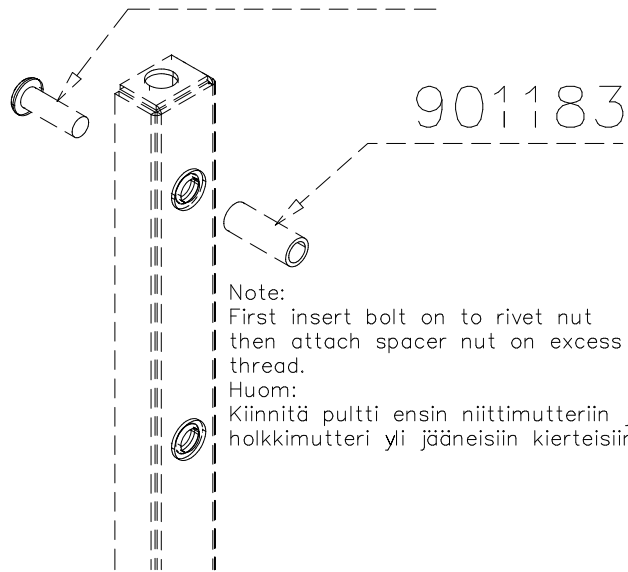


DET 2

902468


Note:
Cut to size and
glue to place.
Huom:
Leikkaa sopivaksi
ja liimaa
paikoilleen.

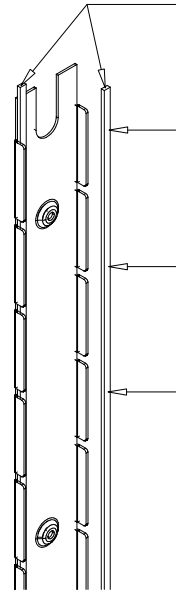

DET 3

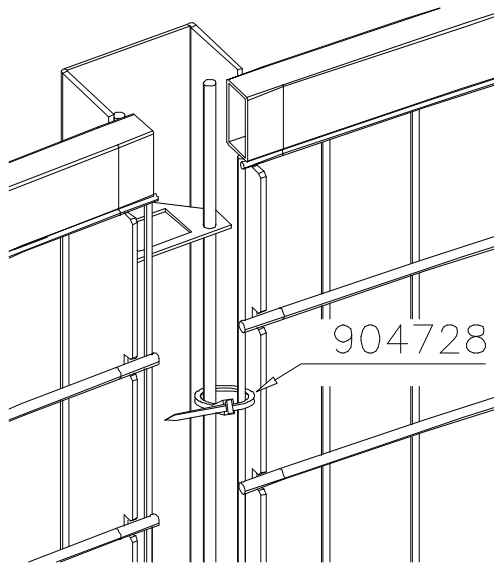


DET 4

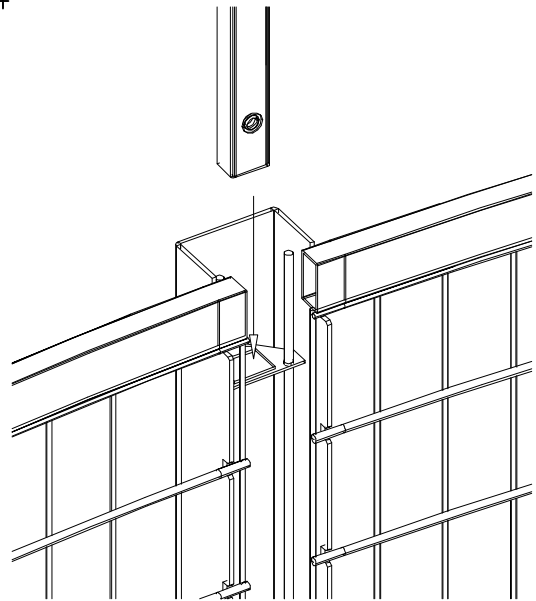


DET 5







901183

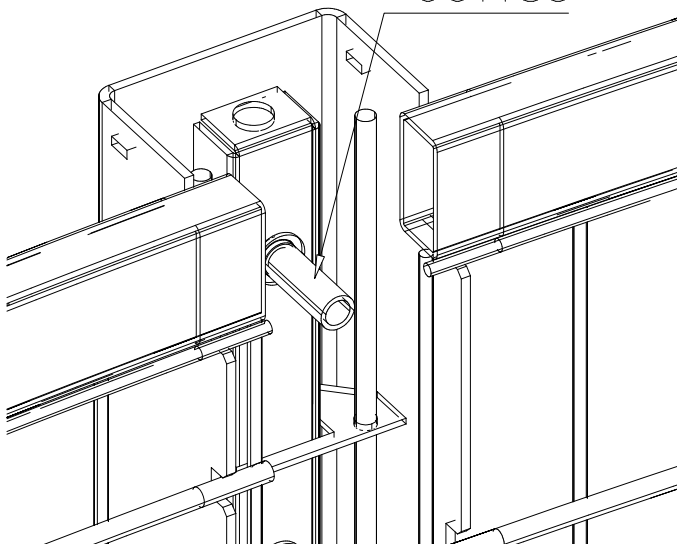


DET 6

904729

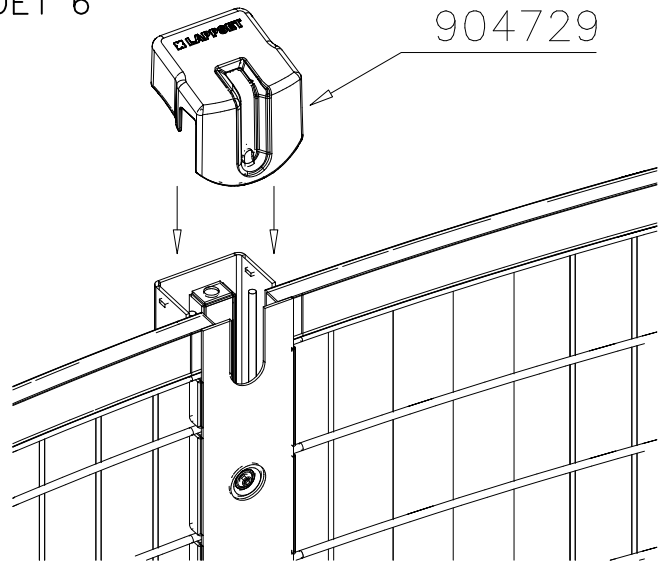

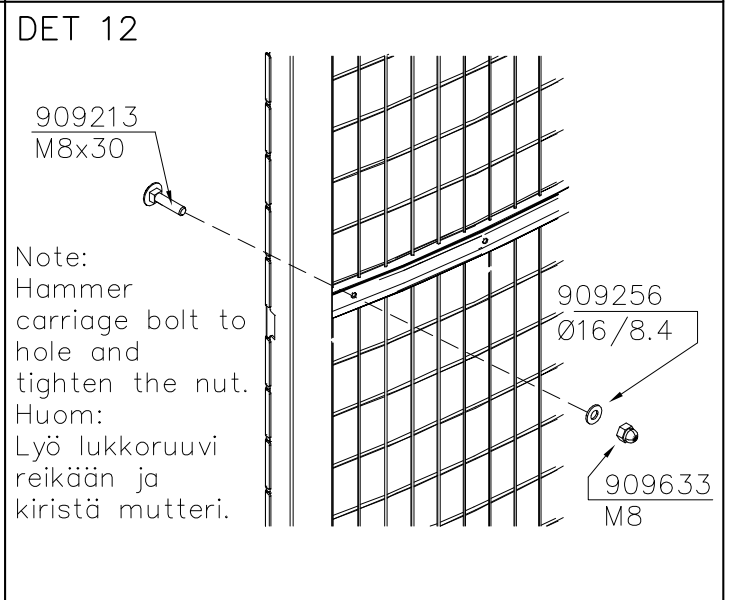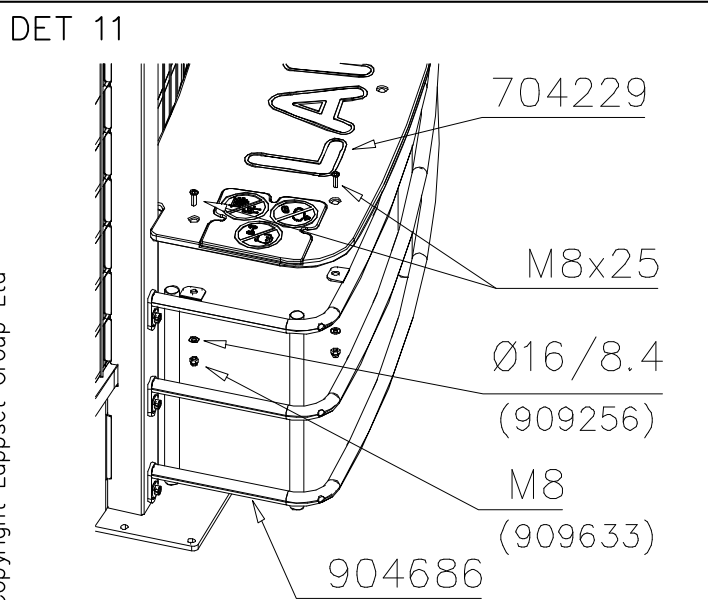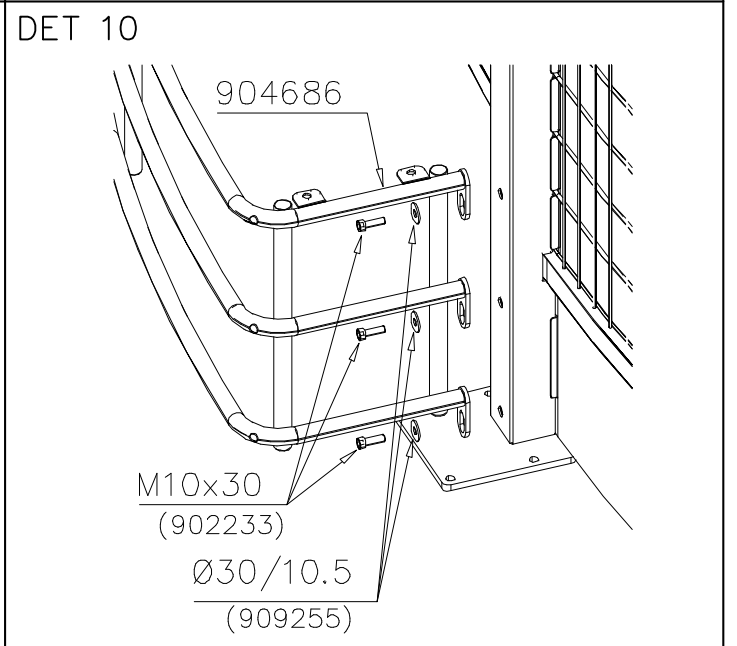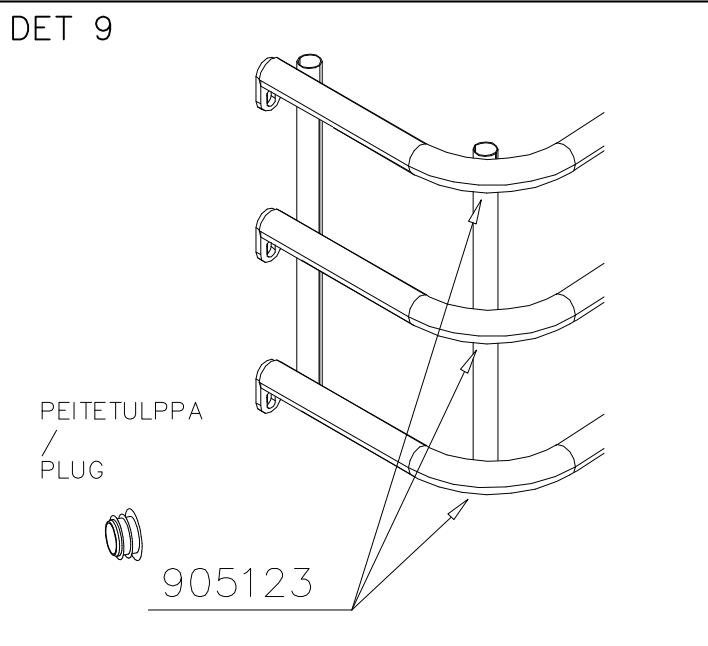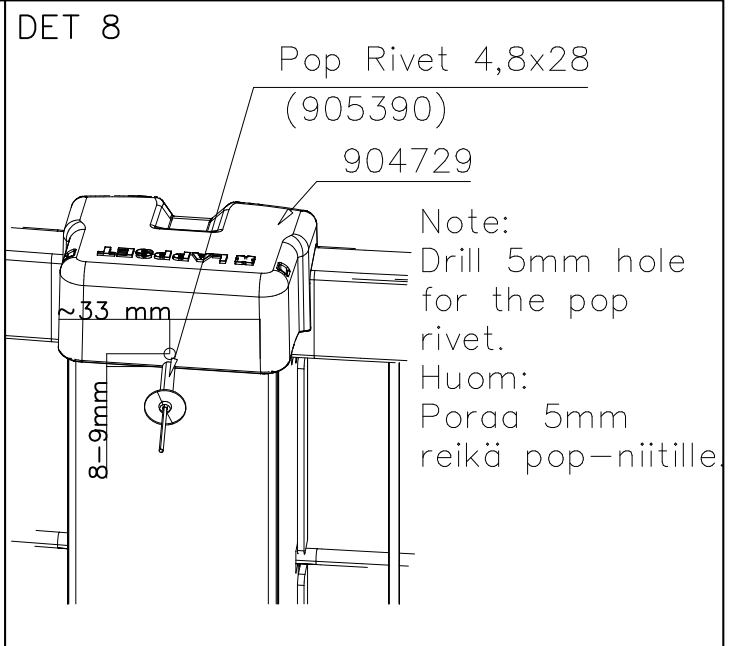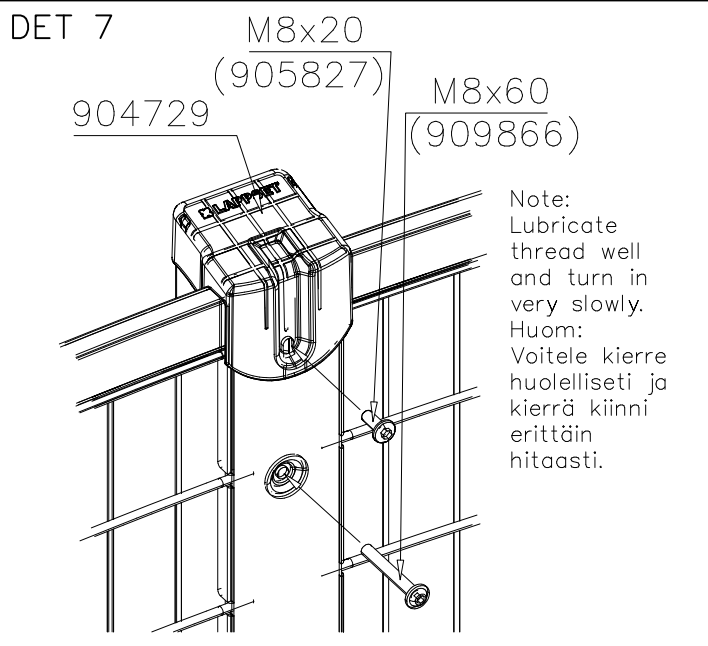
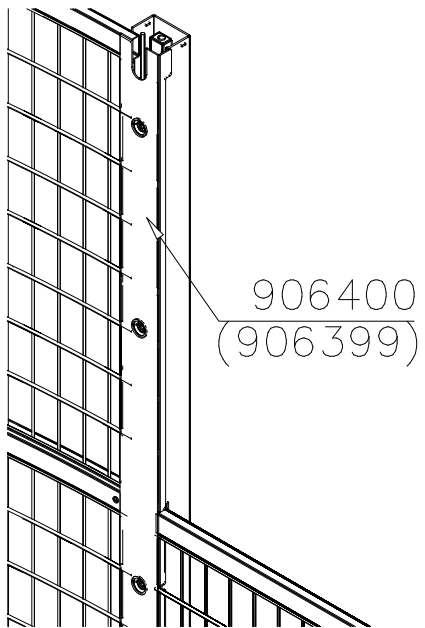
<p>DET 13</p>  <p>906400 (906399)</p>	<p>DET 14</p>
<p>DET 15</p>	<p>DET 16</p>
<p>DET 17</p>	<p>DET 18</p>

