


Installation Instructions

Wall Fixed

Mirror Chimes

Page 1 of 3

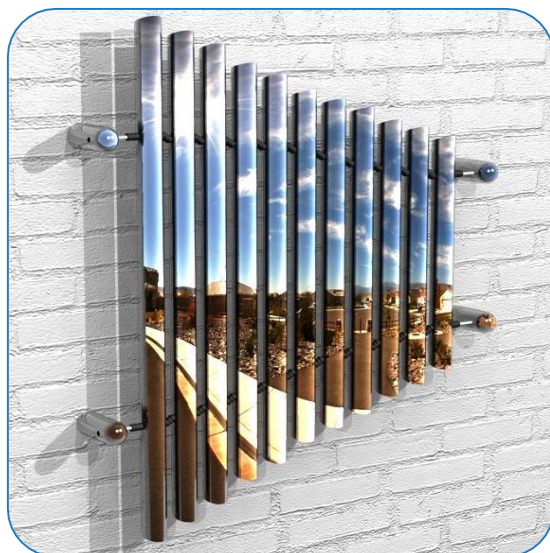

1. Mark hole positions on wall, then drill to manufacturers specified diameter and depth of M10 rawl bolt (See Wall Fix installation sheet)



2. Once holes are drilled insert M10 rawl bolts into holes and set in place to secure tightly

3. Attach wall mounts onto rawl bolts making sure they are tight to the wall and have the large holes to the outside. Use a long tool to tighten further.

4. Once all mounts are fixed in place attach the notes using M8 Barrel Nuts and Pin torx bit.

Weight of heaviest part **18kg** (Mirror Chimes)

Install Instrument with 1m free space (from widest point) around it.

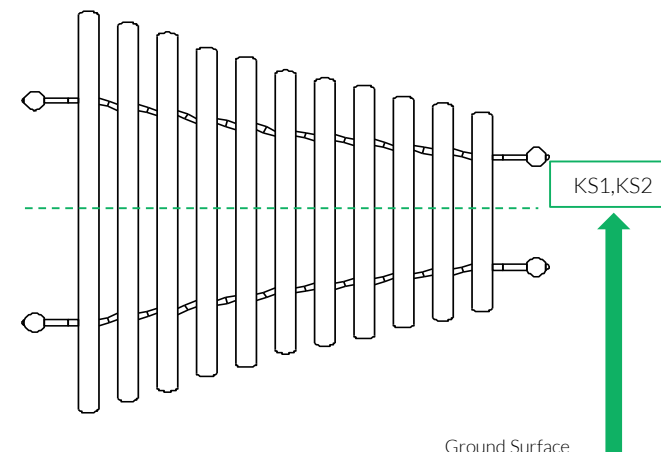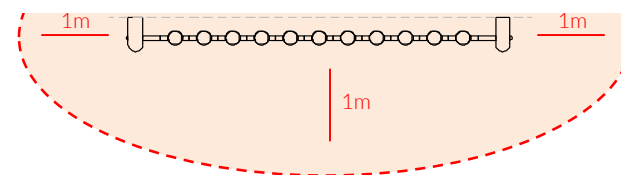

CAUTION: Chime surface can get hot in direct sunlight, if possible install in shaded areas.

KS2 - 850mm

KS1 - 700mm

Metric Conversion:
700mm/ 27 9/16"
850mm/ 33 15/32"
1m/ 39 3/8"



x4

M8x30 Barrel Nut



x4

Wall mounts



1 Small Red and
1 Large Red

Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M10 Rawl Bolt



Spares available from
percussionplay.com or from your
local distributor

20 Kg

Tools:



x1


TX 40 Driver Bit

COMPONENTS LIST:

M8 Barrel Nut Pin torx X4

Wall Fixed

Mirror Chimes
Page 2 of 3

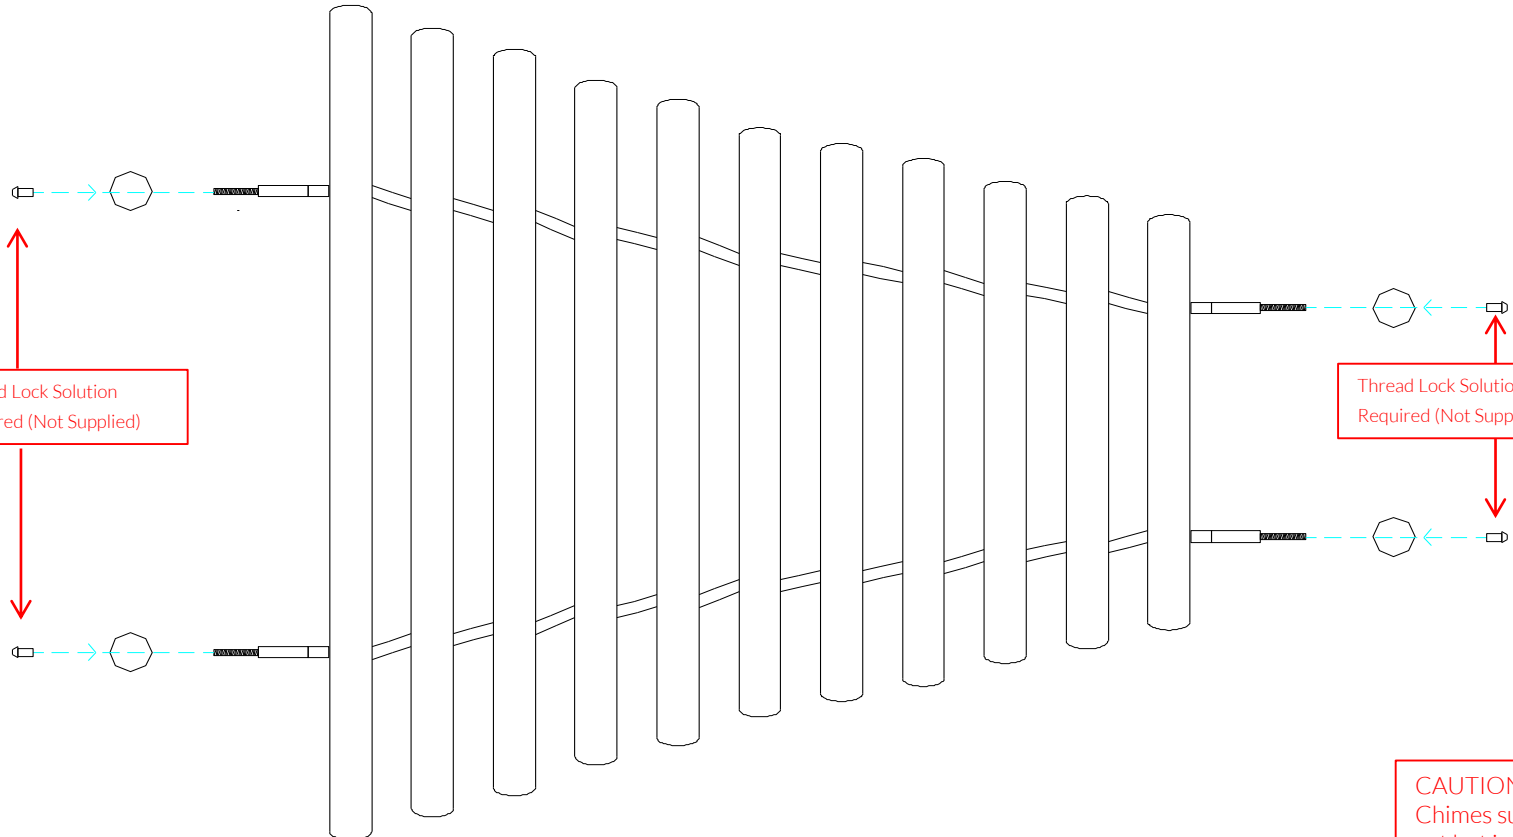

Thread Lock Solution
Required (Not Supplied)

Thread Lock Solution
Required (Not Supplied)

CAUTION: Mirror Chimes surface can get hot in direct sunlight, if possible install in shaded areas.

Instrument Components:



x4

M8x30 Barrel Nut



x4

Wall mounts

Thread Lock Solution
Required (Not Supplied)



Pair Small Red
Beaters X1

Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M10 Rawl Bolt



Spares available from
percussionplay.com or from your
local distributor

20 Kg

Wall Fix Installation

Wall Fixed Mirror Chimes Page 3 of 3



Instrument Components:



x4

M8 Barrel Nut



x4


Wall mounts

Metric Conversion:
1290mm/50 25/32"
1298mm/51 7/64"
1364mm/ 53 45/64"
590mm/ 23 1/4"
295mm/ 11 5/8"



BSEN 1176

1. Mark hole positions .

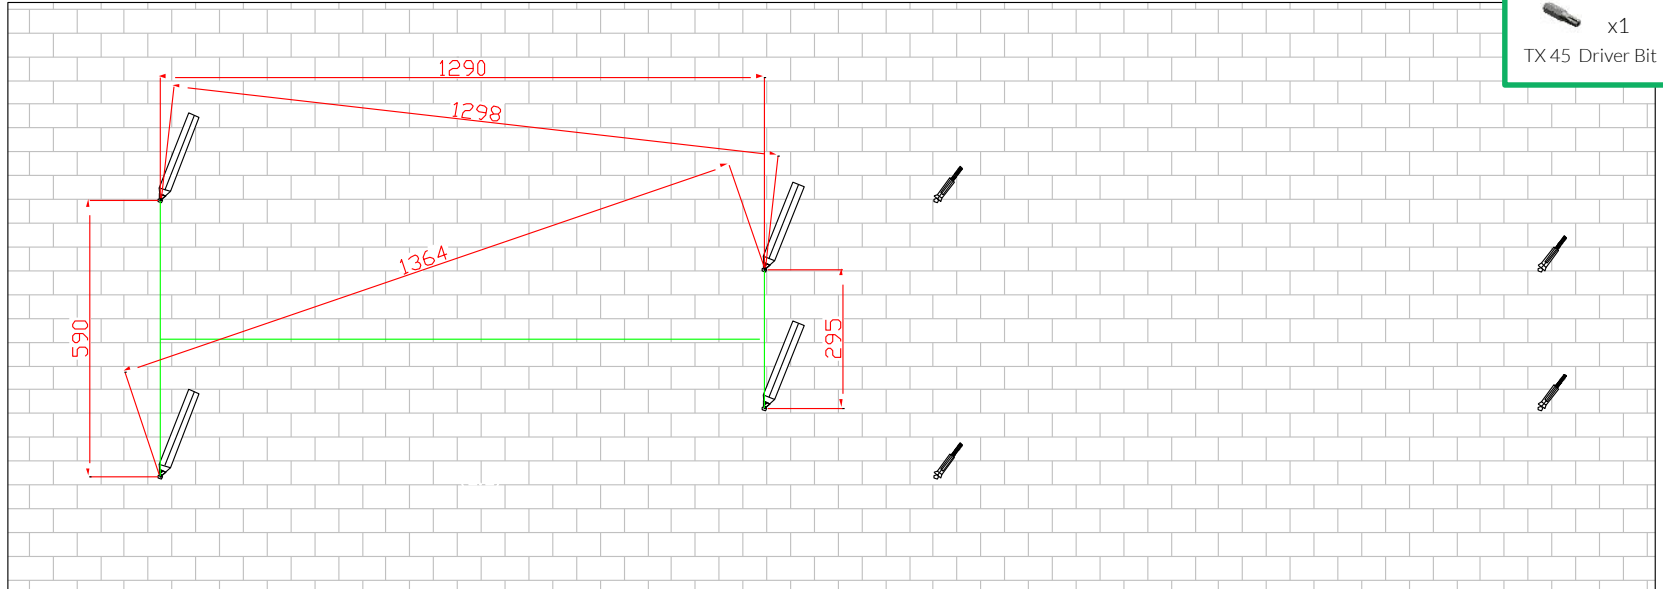

2. Drill holes .

Tools:



x1

TX 45 Driver Bit

3. Fit wall mounts .

4. Attach notes .

