

### Surface Fixed

Harmony Flower Page 1 of 3



#### Components:



M10x40 Security Screw



M10 Barrel Nut





2 Part Cover Cap

Metric Conversion: 1345mm/5261/64" 1095mm/437/64" 945mm/3713/64" 1.5m/59"




# Installation Instructions






Weight of heaviest part 6kg (Surface Plate)

- **1**. Unpack ground fixing leg 1no.
- 2. Lay packaging out on floor or assemble on non-abrasive surface to prevent marking of polished stainless steel.
- 3. Align holes on leg to holes on surface fixing plate (opposite end to polished domes) and secure in place using 1no. M10 x 40mm Screw and Barrel Nut provided. Tools required TX 45 Driver Bits)
- **4.** Invert assembled frame so Bells are at the top.
- **5.Locate Flower** in desired location and mark holes to fix to surface.
- 6. Fix to Surface using recommended ground anchors (Ground Anchors are not supplied)
- 7. Make sure all fixings are covered and secure using cover caps provided

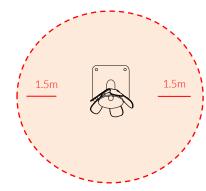

Instrument with 1.5m free space (from widest point) around it.

Large 1345mm Medium 1095mm Small 945mm from plate

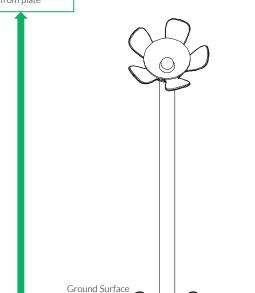









# Surface Fixed

Harmony Flower Page 2 of 3



# Components:




Saddle Strap



M6x20 Security Screws

# Installation Instructions

### PETAL & BELL COLOUR COMBINATIONS

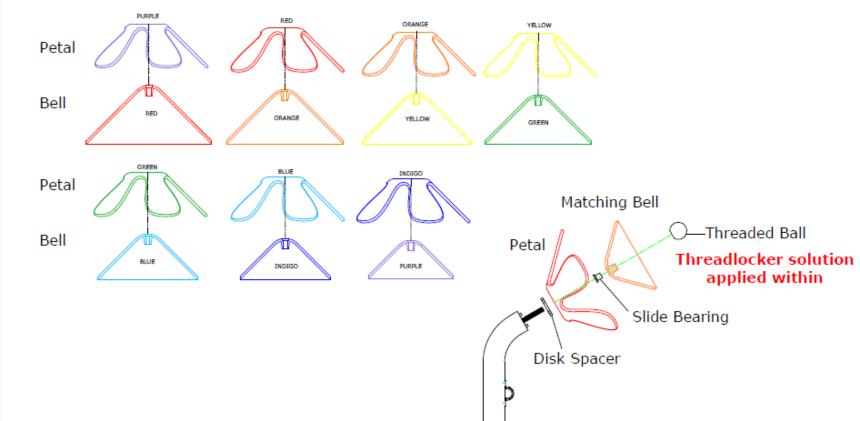









### Surface Fixed

Harmony Flower Page 3 of 3



#### Components:

x1 M10x40 Security Screw




M10 Barrel Nut




2 Part Cover Cap

Thread Lock Solution Required (Not Supplied)

# Assembly Guide PPHARMB

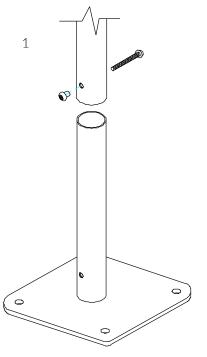

Locate the Surface fix Plate into the leg of the instrument.

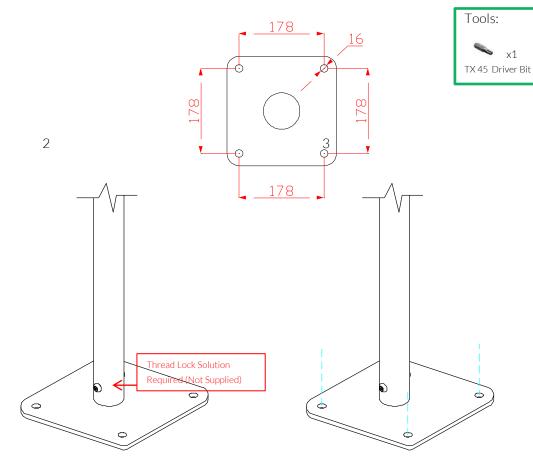

Fix instrument to Surface fix plate using M10 bolt and Barrel Nut and use **thread locking solution** to prevent fixings working loose.

Fix Surface Plate to the ground surface **Ground Anchors Not provided**cover fixings with caps provided







